# VESSEL

**ベ***ツセル* イオンパーツクリーナー

No.IPC - 40

### 用途

本製品は、静電気により付着した微細粉塵や静電気を嫌う部品の除電・除塵に使用する装置です。 イオン化された空間の中で強力エアーブローによって異物を吹き飛ばします。吹き飛ばされた異物は集塵 装置によって強制的に回収されます。

取扱説明書

目次	
安全にお使いいただくために・・・・・・・・・・・・・・・・・・・・・・ P.2	
製品の概要・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・ P.5	
外観寸法 •••••• P.7	
構成部品の機能・・・・・ P.8	
設置 ······ P.10	
運転 ······ P.16	
メンテナンス・・・・・ P.22	
保管、異常時の処置・・・・・ P.28	
撤去、廃棄、交換部品・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・P.30	
保証書 ······ P.30	

## 安全上のご注意

本製品をご使用の前に本書を必ず熟読してください。

本製品をご使用される全員が安全性について認識できるよう責任をもって本書を活用してください。 熟読された後はいつでも活用できるように大切に保管してください。

ここに示した注意事項は、危険の大きさにより次の2段階に区分して表示しています。

⚠警告	取り扱いを誤った場合、死亡または重傷を負う可能性が想定される場合
⚠注意	取り扱いを誤った場合、傷害を負う可能性および物的損害のみの発生が想定さ れる場合
絵表示の例	
$\bigtriangleup$	この記号は、「警告や注意」を促す内容です。
$\otimes$	この記号は、行為を「禁止」する内容です。
	この記号は、行為を「強制」する内容です。

▲警告 () 禁止 除電、除塵以外の目的に使用しないでください。 火災事故防止のため、以下のような火気および爆発性粉塵、含塵液体液霧は絶 対に吸引しないでください。 火のついたもの:タバコの吸い殻、マッチなどの火種 火花を含むもの:研削加工での火花や火の粉を含む粉塵など **引火性のもの**:ガソリン、シンナー、ベンジン、灯油、油や洗浄液および引火 性物質が付着混在した物質など **爆発性のもの**:アルミニウム、マグネシウム、チタン、エポキシ樹脂等の爆発 ○ 吸引禁止 性粉塵、爆発性物質および粒径・濃度その他の条件により粉塵 爆発を起こす可能性のある粉塵や爆発性液体、液霧および爆発 性物質が付着混在した物質など 可燃性のもの:可燃性粉塵や可燃性液体液霧および可燃性物質が付着混在した 物質など **非常性のもの**:腐蝕性物質、粘着性物質およびそれらが付着混在する物体、な らびに非常性のものが多く含まれる気体など 液体液露状のもの:工作機械から発生する水分を含んだ粉塵など 故障事故防止のため、湿った粉塵や水、油など水分を含むものは絶対に吸引し ないでください。 ○ 吸引禁止 濡れた粉塵を集塵されるとフィルタの目詰まりが起こり回復不能になりま す。また耐湿耐油に対応していませんので、腐蝕や漏れ、内部ダクトの粉塵 堆積を発生させるなど想定外の故障・事故などが発生する恐れがあります。 火災事故防止のため、以下のような共用使用は絶対におこなわないでください。 ◇ 共用禁止 ・粉塵が本機内部で混合され危険な物質に変化する場合。

Ŵ	注	音
<u>· · ·</u>		ì

● 必ず守る	設置場所の周囲状況を考慮してください。 ・屋内で風雨や直射日光にさらされない所としてください。 ・水や油のかかる場所は避けてください。 ・本体に著しい振動や衝撃が加わる場所 ・温度は 0 ~40 。湿度は 20~80%でご使用ください。	
● 必ず守る	火災事故防止のため、作業後には点検をおこなってください。	
● 必ず守る	構成部品の取り付けは確実におこなってください。 取り付け不良による漏れでモータが過負荷となり、焼損の恐れがあります。	
● 必ず守る	本書は簡単に参照できるように、製品のそばに保管してください。	
◎ 禁止	本書を理解できるまでは、製品の設置、使用、保守をしないでください。	

	⚠警告	
◎ 禁止	火災事故防止のため、仕様に示された電源の規格以外で使用しないでください。	
◎ 塗装禁止	塗装ブースとしての使用禁止。塗装作業をおこなわないでください。	
◎ 覗込禁止	エアーノズルの先を覗き込まないでください。センサが感知し圧縮エアーが 噴出しますので、目や顔に当たると危険です。	
◇ 分解禁止	構成部品の取り外しや改造、無理な分解・組立てはおこなわないでください。 ・製品は安全・性能面での基準で製作しており、取り外しや改造は危険です。 ・異常内容によっては、お客様による対応が不可能な場合がありますので必 ずお買い求めの販売店または弊社営業所までお問い合わせください。	
◎ 増速禁止	インパータによる増速運転はおこなわないでください。 増速はモータの過負荷や回転体などの強度面で危険性が生じます。また、 減速は風量低下によるモータの冷却不足が発生します。	
● 必ず守る	感電事故防止のため、以下の事項を必ず守ってください。 <ul> <li>・結線作業時には必ず電源コードのプラグをコンセントから抜いて作業をおこなってください。</li> <li>・アース(接地)を必ず取り付けてください。</li> </ul>	

## 安全にお使いいただくために

⚠警告		
	サーマルプロテクターが作動し運転が停止した時は、必ず電源を切ってくだ さい。	
● 必ず守る	サーマルプロテクターはモータが過負荷状態になった時に自動的に運転を 停止させますが、自動復帰型ですので電源が入ったままですと突然運転が 自動的に再開され事故などの原因となり危険です。 スイッチ、元電源を切って原因を究明してください。 なお、原因の究明、除去するまでは運転を再開しないでください。	
● 必ず守る	粉塵はためておかず、早めの処理をおこなってください。 粉塵は条件により、燃焼や爆発の危険があります。	
● 必ず守る	保守・点検作業時には、必ず電源コードのプラグをコンセントから抜いて作 業をおこなってください。	

製品には次の禁止・注意マークを表示しております。

絵表示の意味

	火気の吸引禁止	可燃性、引火性物質の 吸引禁止
	爆発性物質の吸引禁止	分解禁止
	感電注意	回転体注意
i	取扱説明書をよくお読み ください。	エアーノズル先端の 覗き込み禁止

## 特長

### 静電気除去装置付き集塵ユニット

- ・作業フードと集塵機をダクトと連結コードでつないだセパレートタイプの除電除塵集塵機です。
- ・作業フードと集塵機を別々に自由に設置できるので、限られた作業スペースを有効活用できます。
- ・集塵機は台下や離れた位置に収納することが可能で、騒音対策にも配慮しています。
  - 作業フード
- ・フード天面には全面透明アクリルを採用しています。光を採り入れ良好な視界を確保しています。
- ・長尺のワークがスムーズに出し入れできる広い開口部になっています。
- ・静電気除去装置を電源と連動させ、フード内を常にイオンエアーの満ちた雰囲気に保ちます。
- ・手でワーク持ってフード内に入れると、センサが感知し自動でエアーブローします。
- ・左右から吹き出す2つのエアーノズルで、大きなワークも瞬時に除塵できます。 集塵機
- ・乾いた微細粉塵用の高性能フィルタ内蔵。集塵機から出る排気で室内を汚しません。
- ・集塵機内部のフィルタ掃除や交換は、前面のカバーをはずすことで簡単におこなえます。 安全性
- ・静電気除去装置は異常監視機能を装備し、ランプの点灯によりチェックが可能です。
- ・フード内に溜まっている気体を排気してから静電気除去装置の電源が入る制御回路を装備しています。(電源投入後7秒後に静電気除去装置が運転開始)

## CEマーキングについて(欧州向け使用機種 No.IPC40-E)

We have certified our manufactured IPC20 are designed and manufactured under the requirement of EU directive with following conditions:

Low voltage Directive (73 / 23 / EEC)

REQUIREMENTS : IEC / EN60335-1, IEC / EN60335-2-80, IEC / EN55014-1,

IEC / EN55014-2, IEC / EN61000-3-2, IEC / EN610003-3, IEC / EN60204-1 POLLUTION DEGREE : II

IP Code : IP2X

保護等級(IP)表示例

第1記号	回転部と充電部に対する人体の接触及
701	び固形異物の侵入に対する保護
Х	適用なし(指示なし)
0	無保護
1	50mmより大きい固形異物に対する保護
2	12 mmより大きい固形異物に対する保護
3	2.5 mmより大きい固形異物に対する保護
4	1mmより大きい固形異物に対する保護
5	じんあい(塵埃)に対する保護
6	じんあい(塵埃)に対する保護

第 2 記号	水の侵入に対する保護
Х	適用なし(指示なし)
0	無保護
1	落下する水滴に対する保護
2	鉛直から 15°以内に落下する水滴に 対する保護
3	散水に対する保護
4	飛まつに対する保護
5	噴水流に対する保護
6	波浪に対する保護
7	浸水に対する保護
8	水中の使用に対する保護

本体仕様

型式	: No.IPC 40	
集塵方法	:フィルタユニット(円筒形カ	ıートリッジフィルタ )
電源電圧	:単相 AC100V(50 / 60Hz	)
消費電力	:200W (50Hz)	280W (60Hz)
電流	:3.0A (50Hz)	3.0A (60Hz)
風量	: 3.3 m³ / min (50Hz)	4.0 m <sup>3</sup> / min (60Hz)
静圧	: 0.88kPa (50Hz)	1.23kPa (60Hz)
テーブル面制御風速	: 0.4 m / sec (50Hz)	0.5 m / sec (60Hz)
集塵容量	: 1.2L	
集塵機出力	: 200 W	
使用エアー圧力	: 0.4~0.7MPa(クリーンエ	アーを使用すること)
使用エアーホース	: 6mm× 4mm	
空気消費量	:355  / min (0.7MPa、実涯	則値)
環境温度・湿度	:0~+40 20~80%RH	(結露氷結のないこと)
騷音	: 56 dB(A) (50Hz)	58 dB(A) (60Hz)
幅×奥行×高さ	:フード 518W×462D×40	2 H m m ( F - 6 C L 含む )
	:集塵機 481W×354D×416	6 H mm
質量	:フード 約12 kg 集塵機 約	1 30 kg
付属品	: センサ用樹脂製調整ドライハ	<i>х</i> —
	:取扱説明書、危険使用禁止表	{示シート、集塵ダクトホース(1.6m)
	:透明アクリル板、ユリヤネジ	ў ( М4×6 )
オプション	:LED 照明ユニット	
	IPC-40 のフード内を明るく	することができ、作業性向上に役立ちます。

## 静電気除去装置仕様

型式 イオン発生方式 印加電圧	: No.F - 6 C L : 交流高圧コロナ放電式 : AC3.5 K V
入力電圧	: DC24V±5%
消費電流	: 253mA typ.(最大風量時)
風量	:HI 0.72 m³ / min LOW 0.4m³ / min(切替)ファンメーカー仕様
保護機能	: 過電流保護ヒューズ(1.0A) 逆電流接続保護ダイオード(60V/1A)
安全機能	:ファンロック停止、 高圧異常時停止、 ルーパー取り外し安全スイッチ
環境温度・湿度	:5~+40 35~85%RH(結露氷結のないこと)
オゾン発生量	:0.05ppm 以下(測定距離 50mm)
除電時間	:約3.2秒 (±1000V ±100V 300mm 風量HI)
イオンバランス	···· ,

外観寸法









## 構成部品の機能

## 構成部品の機能



フードおよび集塵機のそれぞれの構成部品および機能を把握していただき、安全運転および安全作 業がおこなえるようにしてください。



- 1)作業フード : 除塵作業で集塵効果を上げるためのブース。
- 2) 透明アクリル板 : 除塵作業で粉塵の飛散を防止するプレート。天面からの光を採り入れて作業面 を明るくしワークを見やすくします。
- 3) 穴あきブレート : 作業をおこなうための作業プレート。 本機内部への大径物の落下も防止します。
- 4)センサ反射板 : ワークの挿入を感知し、エアー電磁弁へ信号を送ります。 感度とタイマの調整は、本書「運転」の項の「センサ」を参照。
- 5) エアーノズル : 自由に方向を変えられるフレキシブルノズル2本。
- 6)静電気除去装置 :静電気の帯電を除去します。制御ボックス内の回路により、フード内に充満した気体を約5秒間排気した後、静電気除去装置の電源が入る構造になっておりますので、静電気除去装置の電源スイッチはONの状態にしておいてください。
- 7)操作ボタン: 集塵機を手元で運転、停止させるボタン。
  - セレクタ式メインスイッチは集塵機についています。
- 8) エアー電磁弁: センサの信号に応じて、圧縮空気をノズルへ供給・停止します。
- 9)ダクト接続口(排気) :ダクトを集塵機と連結する部分です。
- 10)集塵ダクトホース : ジャバラ式 延ばしたときの長さ 1.6m。
- 11) 連結コード : コネクタ式 集塵機と接続するためのコード 長さ 1.6m。
- 12) 取っ手 : フード部を移動する際のもち手部分です。

## 構成部品の機能



24)-1 円筒形カートリッジフィルタ(不織布):ユニット使用数 1 24)-2 フィルタ用パッキン :ユニット使用数 2



## 設置環境

## ⚠警告

◎ 禁止	次の場所では使用しないでください。爆発や火災のおそれがあります。 ・防爆を要求する環境
	・腐蝕性ガスや可燃性・爆発性ガスを取り扱う場所

⚠注意		
● 必ず守る	設置場所の周囲状況を考慮してください。 ・屋内で風雨や直射日光にさらされない所としてください。 ・水や油のかかる場所は避けてください。 ・本体に著しい振動や衝撃が加わる場所 ・温度は 0 ~40 。湿度は 20~80%でご使用ください。	
● 必ず守る	本機を直接高温・多湿の場所にさらさないでください。 モータの焼損・故障の恐れがあります。	

### 設置場所

屋内で風雨や直射日光にさらされない所としてください。 水や油のかかる場所や結露・急激な温度変化のある場所は避けてください。 本体に著しい振動や衝撃が加わる場所は避けてください。 本機は背面が排気口となっていますので、壁面などに密着させますと正常な排気ができなくな り吸塵能力が低下します。本機の背面は壁面などから10cm以上離して据え付けてください。

### 周囲温度・湿度

温度は、0 ~ 40 湿度は 20~80% でご使用ください。

#### 雰囲気

防爆を要求する環境では運転できません。 腐蝕性ガスや可燃性・爆発性ガスを取り扱う場所では運転できません。 また風通しが良く、正常空気の雰囲気でご使用ください。

#### 電源・エアー

本機は電源として AC100V(50/60Hz)、クリーンエアーは 0.4MPa~0.7MPa の圧縮空気 が必要です。これらの配線および配管が可能な場所で使用してください。

#### 保守スペース

保守・点検等のスペースを確保してください。 特に、日常の手入れに必要な本機前面に必要なスペースの確保をしてください。

## 設置する台

作業フードおよび集塵機は、水平になるよう凸凹のない平坦な面で丈夫な台の上に載せてご使用 ください。

⚠警告		
● 必ず守る	転倒防止のため、作業面に乗ったり重量物を載せたりしないでください。	
● 必ず守る	設置するときは水平になるよう凸凹のない平坦な面で丈夫な台の上に載せてご 使用ください。 落下などにより、製品の破損や故障の原因となります。	
△ 注意	本製品の質量を確認の上、認識してください。 ・設置・移動の際には指、足や身体のいかなる部分も製品の下には入れないよ うに十分注意を払ってください。 ・設置・移動の際には転倒等に十分注意を払ってください。 ・フードにものを載せた状態で移動しないでください。フードから落下するお それがあります。	

同梱品の取り付け

### 透明アクリル板の取り付け

作業フード天面のアクリル板は、製品配送中の割れを防ぐ ため、はずした状態で梱包されております。ご使用前に、 同梱のユリヤネジ 6 本で透明アクリル板を取り付けてく ださい。

ネジ位置は右図を参照してください。



	⚠警告
● 必ず守る	作業フード天面の透明アクリル板は、除塵作業中に粉塵の飛散を防止するため のものです。作業する際には同梱の透明アクリル板を必ず取り付けてください。

### 危険使用禁止表示シートの取り付け

本製品の使用管理者は、同梱の危険使用禁止表示シートに 記載された「危険な使用の禁止」に同意していただく必要 があります。

署名欄に署名していただき、作業フードの側面等作業者 が確認しやすい場所に掲示してください。



## 作業フードと集塵機の接続

設置場所が決まりましたら、作業フードから出ている連結コードおよび同梱の集塵ダクトホー スを接続してください。



#### 集塵ダクトホースの接続

作業フード裏面の排気口と集塵機上面にある吸気口に同梱の集塵ダクトホースを接続してくだ さい。接続位置は下図を参照してください。



#### 連結コードの接続

作業フード裏面から出ている連結コードを集塵機 上面にあるコネクタ部に接続してください。 集塵機への接続は着脱が簡単におこなえる コネクタ式になっています。 接続位置は右図を参照してください。





設置

### エアーの配管



#### 使用エアー

本機は除塵エアーブローのためクリーンな圧縮空気の供給が必要です。

エアーの圧力は 0.4~0.7MPa の範囲で供給してください。

供給された空気圧を利用して弁の動作を助けるパイロット式電磁弁を使用しているため、供 給圧が低いと正しく動作しません。

エアードライヤーを使用して水分を取り除いてください。(露点温度-15 以下)

ミストセパレータ(0.3 µm)を使用して不純物を取り除いてください。

エアーの温度は0~40 の範囲で供給してください



### 使用ホース

耐圧性能のあるエアーホース(外径 6mm×内径 4mm)を使用してください。

### ホースの接続

作業フード裏側の電磁弁下側のワンタッチホース継ぎ手(エアー供給口)に接続してください。 以下の図を参照してください。



### ダクトの配管

## 排気ダクト

集塵機裏側に排気口を設けています。

内径 100mmのダクトを接続できるフランジは、オプション品となっております。 ダクトを接続すると、吸塵能力が低下しますのでご注意ください。

## 電源の配線

▲警告		
● 必ず守る	必ず交流 100V(50 / 60Hz)でご使用ください。 火災や感電の恐れがあります。	
● 必ず守る	感電事故防止のため、接続作業時には必ず元電源を切ってください。	
● 必ず守る	漏電・感電・火災事故防止のため、配線は電気設備技術基準・内線規定に従っ て施工してください。	
● 必ず守る	プラグをコンセントへさす時は、必ずメインスイッチが(O)に倒れていること を確認してください。	

### 仕様の確認

本機の電源仕様が供給電源に合致しているかを確認してください。

#### 配線用遮断器

過負荷防止のため、配線用遮断器をご使用ください。漏電遮断器の設置もお奨めします。

#### 延長コード

延長コードを使用して電源より離れた場所で使用される場合、延長コードの芯線が細いと電圧 が低下し始動が困難となり十分な能力を発揮できなくなります。また、許容電流値以上の電流 が流れることによりコードの絶縁が損なわれますので、必ず許容電流値以上の芯線のあるもの をご使用ください。

### 電源コード

プラグ付きコードとなっていますので、 コンセント(AC100V)へ確実に差し込んでください。



### 静電気除去装置

連動運転させるため、静電気除去装置の電源スイッチはONの状態にしておいてください。

アースの取り付け



電気設備基準でアースの取り付けは義務付けられています。 アースの接続を確実におこなってください。

### 静電気除去装置のアース

静電気除去装置もアースが必要です。本機のアース端子に接続されています。

運転

## 使用前の点検

運転をはじめる前に設置の各項目が守られているかを再確認してください。

さらに、本製品に異常がないか確認してください。

- ・破損、ネジのゆるみ、コネクタのゆるみなどがないか。
- ・前ふた、後ふたの各々のカバーが完全にしまっているか。
- ・集塵ダクトホースや連結コードがはずれていないか。

## 運転の条件

運転は次の条件のもとでおこなってください。

- ・電源電圧の許容変動範囲は±10%以内。
- ・周波数範囲は銘板に記入されている定格周波数。

・インバータによる運転はおこなわない。定格周波数による運転で所定の性能が得られるようになっています。増速はモータの過負荷や強度面で危険ですし減速はモータの冷却不足が発生します。

⚠警告		
◇ 禁止	インバータによる増速運転は、絶対におこなわないでください。	

### 粉塵の条件

取り扱う粉塵は次の条件をお守りください。

本機は一般粉塵用です。乾いた微細粒粉塵のエアーブロー作業に使用できます。

なお、濡れた粉塵や水油などの液体およびスプレーミストは絶対吸引させないでください。

また、爆発性・引火性・可燃性物質の付着した粉塵も絶対吸引させないでください。

粘着性および腐蝕性の物質は吸引させないでください。

火災事故防止のため、以下のような火気および爆発性粉塵、含塵液体液霧は絶対に吸引しない でください。

火のついたもの:タバコの吸い殻、マッチなどの火種

火花を含むもの:研削加工での火花や火の粉を含む粉塵など

- **引火性のもの**:ガソリン、シンナー、ベンジン、灯油、油や洗浄液および引火性物質が付着混 在した物質など
- 爆発性のもの:アルミニウム、マグネシウム、チタン、エポキシ樹脂等の爆発性粉塵、爆発性物質および粒径・濃度その他の条件により粉塵爆発を起こす可能性のある粉塵や爆発性液体、液霧および爆発性物質が付着混在した物質など
- 可燃性のもの:可燃性粉塵や可燃性液体液霧および可燃性物質が付着混在した物質など
- **非常性のもの**:腐蝕性物質、粘着性物質およびそれらが付着混在する物体、ならびに非常性の ものが多く含まれる気体など

液体液霧状のもの:工作機械から発生する水分を含んだ粉塵など

可燃性粉塵や可燃性物質が付着した粉塵の吸引はしないでください。

不燃性物質が加工等により可燃性に変化している可燃性物質は特に注意が必要です。

可燃性粉塵に変化しているかどうかの判断は非常に難しく、お客様の責任において判断願いま す。また、可燃性粉塵と判明した場合は直ちに本機の使用を停止してください。

取り扱う粉塵のそれぞれがたとえ安全なものであっても粉塵が混合することにより危険な物質 に変化する場合があります。混合に伴う物質の変化には特に注意が必要ですので、お客様の責 任においてご確認願います。 粉塵の混合に伴う安全性が確認できなければ、同一機での共用使用は絶対におこなわないでください。

なお、混合された捕集粉塵の廃棄処理については、想定外の諸問題の発生も考えられますので お客様の責任において判断願います。

湿った粉塵や水、油など水分を含むものは絶対に吸引しないでください。

液体で濡れた粉塵や含液粉塵を集塵されるとフィルタが目詰まりを起こし回復不能になったり、 また耐湿耐油対応ではありませんので腐蝕や漏れ、内部ダクトの粉塵堆積を発生させるなど想 定外の故障・事故が発生する恐れがあります。

⚠警告		
◇ 吸引禁止	火気および引火性・爆発性・可燃性粉塵及び爆発性・引火性・可燃性物質の 付着した粉塵・混在した粉塵等は絶対吸引させないでください。	
◇ 吸引禁止	爆発性・引火性・可燃性液体やそれらにより濡れた粉塵、また、それらが混 在した粉塵・付着した粉塵等は絶対に吸引させないでください。	
◇ 吸引禁止	故障事故防止のため、湿った粉塵や水、油など水分を含むものは絶対に吸引 しないでください。	
◇ 共用禁止	混合時、危険変化物質の同一機での共用使用禁止。	

### 運転

### 操作

作業フード前面の 運転(緑) 停止(黒)の押しボタンで操作 します。

集塵機の前面のセレクタスイッ チはメインスイッチです。 運転操作をおこなう前に、OF F()からON(|)に切り 替えてください。





・過負荷防止のため、配線用遮断器(電動機用)を取り付けてください。

- ・その場合必ず適用電動機 (適合電流値)のものを使用してください。
- ・漏電遮断器も設置することをおすすめします。



## 穴あきプレートについて

作業台として使用します。本機内部への大径物落下も防止します。

⚠注意		
禁止	取り外して使用しないでください。	
△ 注意	作業を行っている過程で穴あきプレートが変形・破損した場合に、そのまま 使用をされますと作業中に危険を伴います。 変形・破損された場合には取り替えることをお奨めします。	
● 必ず守る	本機は手作業等による軽作業を対象としておりますので、穴あきプレート上 に重量物を載せたり、強い衝撃を与えたりしないでください。 穴あきプレートの耐荷重は10kgです。	

エアー流量調整弁

本機裏側に取り付けられている「電磁弁」の2 次側に「流量調整弁」があります。 エアーノズルからでるプローエアーの強弱を

#### 調整できます。

出荷時には最大風量に設定されています。



## 静電気除去装置

集塵機前面のメインスイッチを ON(|)に切り替え、作業フードの運転ボタン(緑)を押すと 集塵部が稼動し、約7秒後に静電気除去装置が連動して運転を始めます。停止ボタン(黒)を 押すと集塵部と同時に停止します。

制御ボックス内部の回路によって静電気除去装置を制御するため、静電気除去装置の電源ス イッチはONの状態にしておいてください。

制御ボックス内部の設定を絶対に変更しないでください。

▲注意		
◇ 分解禁止	製品を改造、分解することはおやめください。 高電圧部品が入っており大変危険です。	
◎ 禁止	吸込み口や吹出し口などの開口部をふさがない。 故障のおそれがあります。	
◎ 禁止	開口部に金属や異物を差し込まない。 感電や故障の原因となります。	
● 電源を抜く	長期間使用しないときは電源コードのプラグをコンセントから抜いてくだ さい。絶縁劣化による感電や故障、火災のおそれがあります。	

### 運転スイッチ「 POWER 」

運転

F-6 の運転の ON / OFF に使用します。ON にすると、ルーバ 一内の白色 L E D ランプが点灯し、運転状況を確認できます。

### 風量の調整「 HI 」「 LO 」

風量切替スイッチでHI(強) LO(弱)の2段階に切替で きます。

### 高圧異常警告LEDランプ「H.V. ALARM」



内蔵の圧電トランスが負荷オーバーを検出し、出力をシャットダウンした場合、前面の「H.V. ALARM」赤色LEDランプが点灯します。ランプが点灯したときは、すぐに主電源の操作ス イッチを切り、電源コードをコンセントから抜いてください。放電針に異物が付着している場 合には「清掃手順」を参照し、清掃してください。

(高圧異常時は、トランスの出力は止まりますが、ファンは回ったままになります。)

### ファンロック警告LEDランプ「FAN ALARM」

内蔵のファンが拘束を検出し回転を停止した場合、前面の「FAN ALARM」赤色LEDランプ が点灯します。警告ランプが点灯したときは、すぐに主電源の操作スイッチを切り、電源コー ドのコンセトから抜いてください。ファンに異物が噛み込んでいる場合は、異物を取り出し再 度電源を入れ、ランプの消灯を確認してください。

原因を取り除き再度電源を入れたとき異常ランプが点灯する場合は、事故防止のため必ず販 売店に点検修理を依頼してください(ファンロック時は、ファンが停止しトランスの出力も 止まります。ただし異物がある場合には起動を繰り返します)。

### センサ

回帰反射型のビームセンサが、作業フード開口部左右についています。

ワークを手で持ちフード内へ差し込むと、センサが感知しエアー電磁弁を開きます。

センサは出荷時に「オフディレイタイマモード:約3秒」に設定されています。

これは、検出信号がオフになってから設定時間だけ延長して出力するモードです。

タイマ時間は出荷時に調整しています。特に必要のない限りこの設定を変更しないでください。 微調整をおこなう場合は同梱のセンサ用樹脂製調整ドライバーを使用してください。

▲警告		
電源を抜く 感電事故防止のため、静電気除去装置の点検の際は必ず電源コードのプラ グをコンセントから抜いて作業をおこなってください。		
⚠注意		
◇ 分解禁止	製品を改造、分解することはおやめください。	
● 必ず守る	付属の樹脂調整ドライバーで微調整をおこなう際、強い力で回すと破損す ることがありますので注意してください。	

運転

### タイマ設定方法

タイマ時間の調整で検出信号がオフになってから延長して出力する時間を調整できます。 プラスドライバーでセンサカバー取付ネジを緩めてセンサカバーを取り外してください。 タイマ時間(TIME)ボリュームを付属ドライバーで回して微調整してください。 左へ回すと時間が短くなり、右へ回すと時間が長くなります。

調整後はセンサカバーをしっかり取り付けて、センサカバー取付ネジで固定してください。



## 作業前点検

点検箇所	点検内容	対策
集塵機	粉塵の堆積状態	粉塵の廃棄処理
未座城	本体部の磨耗、腐蝕及び破損	メーカー修理
穴あきプレート	作業を妨げるような変形や破損がないか	取り替え交換
透明アクリル板	フード内の作業部が見えにくくなるようなキ ズ、汚れ、破損	取り替え交換
シールパッキン	本体及びダクト系配管において空気漏れ又は 粉塵漏れ	取り替え交換
引出し受皿	粉塵の堆積状態	粉塵の廃棄処理
フィルタユニット	フィルタ本体の目詰まり、破損、劣化、湿り 等 パッキンの劣化、破損、欠落	粉塵の払い落とし、又はフィルタユ ニットの取り替え交換
電源プラグ	確実にコンセントに接続されているか	確実に接続する
メインスイッチ・操作 ボタン	破損、欠落および作動不良	メーカー修理
ファン	異常な振動	メーカー修理
軸受け	異常音の発生	メーカー修理
センサ	正常に動作しているか	メーカー修理
電磁弁	正常に動作しているか	メーカー修理
エアーノズル	正常に動作しているか	メーカー修理
静電気除去装置	正常に動作しているか	メーカー修理

## 作業後点検

点検箇所	点検内容	対策
引出し受皿	粉塵の堆積状態	粉塵の廃棄処理
フィルタユニット	フィルタ本体の目詰まり、破損、劣化、湿り	粉塵の払い落とし、又はフィルタユ
	等 パッキンの劣化、破損、欠落	ニットの取り替え交換
集塵機	粉塵の堆積状態	粉塵の廃棄処理
モータ	異常な発熱	メーカー修理

定期点検 ーヶ月に一度実施してください。対策は管理者がおこなってください。

点検箇所	点検内容	対策
電源コード(プラグ)	変形及びキズがないか	メーカー修理
制御ボックス		必ずスイッチを切り、電源コードの
センサ	取付ネジ等がゆるんだり、欠落していないか	プラグを抜いてから取付ネジ等の
電磁弁		増し締め、及び組付けをおこなう。
エアーノズル	ハーノの吸損、方化	パーツの破損、劣化の場合は取り替
静電気除去装置		え交換、又はメーカー修理

## フィルタの掃除と処理

ご使用中に吸引力の低下を感じた場合は、内部のフィルタユニットの目詰まりですから、下記の手順で粉塵の払い落としをおこなってください。同時に、可燃性の粉塵は、条件により燃焼・爆発の 危険性もありますので、溜めたまま放置せず、早めの処理をしてください。

⚠警告			
● 必ず守る	粉塵は溜めて置かず早めの処理をしてください。 たとえ不燃性の粉塵であっても粒径・濃度・その他の条件により粉塵の燃焼・ 爆発の危険性がありますので、すべての粉塵に対して注意を払ってください。		
● 必ず守る	混合された捕集粉塵の廃棄については想定外の諸問題の発生も考えられますのでお客様の責任において判断願います。		
	⚠注意		
● 必ず守る	火災事故防止のため、火花等が発生した作業の後には必ず粉塵の確認、点検 をおこなってから作業の終了としてください。		
● 必ず守る	前ふたの取り付けが不完全ですと吸引力の低下や過負荷によるモータ焼損の 恐れがありますので、取り付けは確実におこなってください。		

## フィルタユニットの掃除(粉塵の払い落とし)

電源を遮断する	メインスイッチをOFF( )にして電源を切り、必ずファンの回転が 完全に停止したことを確認してください。捕集された微粉塵の吹き抜け が発生する恐れがあります。				
前ふたを開ける	パッチン錠を外して前ふたを引き出してください。				
フィルタを外す	内部のフィルタユニットを取り外してください。				
粉塵の払い落とし	フィルタユニットの粉塵の払い落としをしてください。				
粉塵の処理	引出し受皿の粉塵を処理してください。				
フィルタを付ける	フィルタユニットを元の場所へ取り付けてください。				
前ふたを閉める	前ふたの差し込みパッチン錠を確実にかけてください。取り付けが不完 全ですと吸引力の低下や過負荷によるモータ焼損の恐れがあります。				



蝶ナットをゆるめる

後部フィルタを取り出す

### 後部フィルタの清掃

後ふたの内部に後部フィルタが入っています。適時取り出して清掃してください。

メインスイッチをOFF()に倒して電源を切り、必ず
 電源を遮断する
 ファンの回転が完全に停止したことを確認してください。
 捕集された微粉塵の吹き抜けが発生する恐れがあります。
 後ふたの4箇所のネジをゆるめ、後ふたをはずしてください。

後ふた内側の4個の蝶ナットをゆるめてください。

案内羽根の中心に入っている後部フィルタを取り出してく ださい。

粉塵の処理

粉塵の払い落とし

後部フィルタを取り付ける

案内羽根を後ふたに取りつける

後ふたを閉める

案内羽根の中心に後部フィルタを取り付けてください。

4個の蝶ナットを締め付けて、案内羽根を後ふたに取り付けてください。

4箇所のネジを締め付けて、後ふたを取り付けてください。



フィルタの交換

フィルタ破損したり長時間の使用で粉塵払い落とし後も吸引力が回復しなくなった場合はフィル タを交換してください。

▲警告				
● 必ず守る	フィルタ交換時においては、ファンの回転が完全に停止したことを確認して ください。また、交換時に誤ってファンを回転させぬように作業においては 電源の管理に十分注意を払ってください。ファンが回転していると物が吸引 されたり、飛散したりする事故が発生し危険です。			
▲注意				
● 必ず守る	前ふたの取り付けが不完全ですと吸引力の低下や過負荷によるモータ焼損の 恐れがありますので、取り付けは確実におこなってください。			
電源を遮断する	<ul> <li>メインスイッチをOFF()に倒して電源を切り、必ずファンの回転</li> <li>が完全に停止したことを確認してください。捕集された微粉塵の吹き抜けが発生する恐れがあります。</li> </ul>			
前ふたを開ける	パッチン錠を外して前ふたを引き出してください。			
フィルタを外す	内部のフィルタユニットを取り外してください。			
フィルタを付け	る 新しいフィルタユニットを元の場所へ取り付けてください。			
前ふたを閉める	<ul> <li>前ふたをさし込み、パッチン錠を確実にかけてください。取り付けが不</li> <li>完全ですと吸引力の低下や過負荷によるモータ焼損の恐れがあります。</li> </ul>			



## 透明アクリル板の交換

作業フード天面の透明アクリル板がキズついたり汚れたりしてフード内が見にくくなった場合は、 下記の手順で透明アクリル板を取り替えてください(販売店よりお取り寄せください)。

ネジをゆるめる	ユリヤネジ6本をゆるめてください。
アクリル板を外す	透明アクリル板を外してください。
アクリル板を取り付ける	新しい透明アクリル板と交換してください。
ネジを締める	ユリヤネジ 6 本を締め付けてください。

ネジ位置は右図を参照してください。



静電気除去装置のメンテナンス

ほとんどメンテナンスを必要としませんが、時々ケース、フィルタ及び針電極の掃除をおこなっ てください。針電極の周囲の汚れや損耗は除電能力の低下を招きます。 また能力の低下をチェックするために、イオンバランスを測定することをお勧めいたします。

⚠警告			
● 電源を抜く 感電事故防止のため、静電気除去装置の点検の際は必ず電源コードの をコンセントから抜いて作業をおこなってください。			
⚠注意			
◇ 分解禁止	フィンガーガードは絶対に外さないでください。 感電や故障の恐れがあります。		
◇ 禁止	洗剤や溶剤で拭いたりしない。ひび割れ・感電や故障のおそれがあります。		
◇ 水濡禁止	水をかけないでください。感電や故障のおそれがあります。		
● 点検する	点検は定期的におこなってください。 早期故障のおそれがあります。		

### 針電極ユニット(ルーバー及び針電極)の掃除/交換

長時間使用した場合、ルーバーや針電極周辺に塵垢が付着し除電性能の低下の原因となります。 100時間ごとに針電極掃除をおこなってください。

放電針清掃・交換の際は必ず運転を停止し、主電源を切ってください

清掃後は針電極ユニットとストッパーを正しく取り付けてください。

放電針の折れ、脱落・針電極ユニットにガタつきなどがある場合は交換してください。 (別売 針電極ユニット F-6H をご使用ください。)

⚠警告			
◎ 禁止	針電極ユニットが破損していたり脱落していたりする場合には、使用を中止 して新しいものに交換してください。感電やケガの恐れがあります		
<ul> <li>         ・ 清掃する         か電針及びルーバーの汚れにより、除電能力の低下や塵埃の飛散が発生しま         す。使用環境に合わせて必ず清掃または交換をおこなってください。     </li> </ul>			

### 清掃手順 / 交換手順

- 1 主電源の操作スイッチを切る。
- 2 角度調整用のつまみネジ(2箇所)をゆるめて、 静電気除去装置を起こす。
- 3 ストッパーをはずす(左右をつまんで引き抜く)。
- 4 針電極ユニットを左回転にまわし取り外す。
- 5 ルーバーは乾いた柔らかい布で拭いてください。 ルーバーの裏側には放電針が付いています。 指や手を傷つけないよう十分注意してください。
- 6 放電針を綿棒で掃除します。汚れがひどい場合は アルコールを少し含ませて付着物を取り除きます。 力を入れすぎますと針が曲がってしまうことがあ りますので、軽くふき取ってください。 指や手を傷つけないよう十分注意してください。
- 7 針電極ユニットを元のように取り付ける。 <u>羽根を右図の位置に必ず合わせてください。</u>
- 8 ストッパーを取り付ける。正しく取り付けないと 安全装置が働き運転しません。
- 9 元の位置に戻し、つまみネジを締める。
- 調整

イオンバランスの調整機能はついていません。本製品は電源回路でイオンバランスを一定に保 つようになっています。

イオンバランスが良好でない場合は、弊社までご連絡ください。

### 除電能力のチェック

チャージプレートモニターを使用してイオンバランスと帯電圧減衰時間の測 定をしてください。参考: IEC61340-5-1・2、ANSI EOS / ESD S3.1

フィルタの清掃 / 交換

フィルタの汚れは除電性能に影響します。清掃は適時おこなってください。 フィルタが傷んでいるときは交換部品「フィルタF-6F」をご購入し、交換してください。







保管

## 保管

⚠注意			
◎ 禁止	次のような場所には保管しないでください。故障のおそれがあります。 ・本体に著しい振動や衝撃が加わる場所 ・仕様に示された範囲を超える高温多湿な場所 ・結露する場所 ・急激な温度変化のある場所 ・可燃性の溶剤や粉塵等、引火や爆発のおそれのある場所 ・ホコリ・粉塵・煙が多い場所 ・水・油・薬品等がかかる場所 ・強電界・強磁界が発生する場所		

異常時の処置

## 異常時の処置

異常時には必ず電源コードのプラグをコンセントから抜いてから原因究明をおこなってください。 修理につきましてはお買い上げの販売店にご相談ください。

異常内容	原因・点検	対策	
所定の性能が得られ	電源仕様の不一致	定格仕様に合わせる	
ない	フィルタユニットの破損、目詰まり	新品と取り替え	
	電源の接続不備	正常に配線する	
		電源電圧は±10%以内で使用	
	サーマルプロテクターの作動	する	
モータが回転しない	リーマルノロノクターのTF動	空気の漏れのないように各々の	
		カバーを完全に締める	
	スイッチの故障	メーカー修理	
	モータ焼損	メーカー修理	
異常音および振動が	羽根車の不釣り合い	メーカー修理	
ある	軸受け	メーカー修理	
	フィルタユニットの破損、目詰まり	新品と取り替え	
粉塵が排出される	シールパッキンの手栓	シール状態の点検または取り替	
₩11年/11111日С160	シールパッキンの点検	え	
	フィルタユニットの取り付け不備	点検後定位置にセットする	
フィルタユニットの			
手入れをしても吸塵	フィルタユニットの目詰まり	新品と取り替え	
能力が回復しない			
センサが機能しない	内部部品の故障	メーカー修理	
電磁弁が機能しない	内部部品の故障	メーカー修理	
静電気除去装置が機	制御回路の故障	メーカー修理	
能しない	内部部品の故障	メーカー修理	

## 撤去

本機の撤去を行なう際には、周囲や作業者の安全を十分確保してからおこなってください。

⚠注意					
● 電源を抜く	本機の撤去作業時には、感電事故防止及び誤作動による事故防止のため、必 ず電源コードのプラグをコンセントから抜いて作業を行なってください。				
● 必ず守る	エアーホースを取り外す際には、必ずエアー源が遮断されているのを確認し てから行なってください。 また、エアーホースを取り外すとエアーホース内の圧縮エアーが噴出するお それがありますので、顔などを近づけて取り外さないでください。				
● 必ず守る	転倒防止のため、フードや集塵機に乗ったり重量物を載せたりしないでくだ さい。				
● 必ず守る	本製品の質量を確認の上、認識してください。 ・撤去、移動の際には指、足や身体のいかなる部分も製品の下にはいれない ように十分注意を払ってください。 ・撤去、移動の際には転倒や落下等に十分注意を払ってください。 フードに物を載せた状態で移動しないでください。フードから落下するお それがあります				

## 廃棄

廃棄

本機を廃棄する際には、法令や地域の条例に従って適切に処理してください。

## 交換部品

交換部品

お客様で交換可能な消耗部品は次の部品となります。 型式とロットナンバーをご確認の上、販売店よりお取り寄せください。

JPC-40		12,6,45
100V+	1P2K	No. 000000
50/60Hz	200/280W	INDOOR LISE

フィルタユニット 品番(24) 透明アクリル板 品番(2) 後部フィルタ 品番(25)

交換の手順は、本書の「メンテナンス」の事項をご参照ください。

お買い上げいただき誠にありがとうございました。

保証期間内に取扱説明書、本体ラベルなどの注意書きに従って正常な状態で使用していて故障した場合には、 本書の記載内容に基づいて無償修理いたします。

保証期間内に故障した場合は、お買い上げの販売店にご依頼の上、本書をご提示ください。

保証期間中でも次のような場合には有償修理となります。

1) 誤った使用方法、取り扱い上の不注意によって生じた損傷や故障

- 2) 不当な修理や改造によって生じた損傷や故障
- 3) 火災、地震、水害、落雷その他天災地変、ガス害、塩害、公害や異常電圧などによって生じた損傷や故障
- 4)お買い上げ後の移動や輸送によって生じた損傷や故障

5)本書の紛失、所定事項の未記入または字句を書き換えられた場合

本書は再発行いたしませんので紛失しないよう大切に保管してください。

この保証書は、本製品の故障に対する無償修理または交換を保証するものであって、本製品の使用または使用不 能によって生じた損害に対して当社が責任を追うものではありません。

この保証書は、明示した期間、条件のもとにおいて無償修理をお約束するものです。したがってこの保証書によってお客様の法律上の権利を制限するものではございません。

型式	IPC-40		
保証期間	お買い上げ日より	1 年間	弊社では製品シリアルナンバーにて出荷日の管理を おこなっております。
お客様	お名前		
	ご住所	<b></b>	
	電話番号		
販売店	店名 / 住所 / 電話	番号	



ホームページアドレス http://www.vessel.co.jp/

本 社	₫537-0001	大阪市東成区深江北 2 丁目 17 番 25 号	☎(06)6976-7771(代)	FAX (06) 6971-1309
東 京 支 店	143-0025	東京都大田区南馬込 5 丁目 43 番 13 号	🖀 (03) 3776-1831 (代)	FAX(03)3776-5607
大阪支店	₫537-0001	大阪市東成区深江北 2 丁目 17 番 25 号	🖀 (06) 6976-7771 (代)	FAX (06) 6971-1309
名古屋営業所	₫457-0014	名古屋市南区呼続四丁目 3 番 1 号	🖀 (052) 821-9575(代)	FAX (052)824-4167
福岡営業所	ঊ812-0016	福岡市博多区博多駅南 6 丁目 1 番 22 号	🔁 ( 092 ) 411-5710	FAX (092) 411-5770
札幌出張所	₸065-0011	札幌市東区北 11 条東 14 丁目 1 番 1 号	🔁 ( 011 ) 711-5003	FAX (011)704-4725
仙台出張所	<b>1</b> 984-0002	仙台市若林区卸町東1丁目2番10号	🔁 ( 022 ) 236-1567	FAX (022)232-7959
広島出張所	₸733-0035	広島市西区南観音7丁目8-11 ロイヤルナカモト	🔁 ( 082 ) 291-0106	FAX (082) 295-1727

12020200.00000



Quality does it.

## Instruction Manual

# **ION/ PARTS CLEANER**

No. IPC40-E



∏i (€ RoHS

Application

This product is used to remove fine powder and dust attracted by static electricity and to remove static electricity from parts that are negatively affected by static electricity.

A powerful air blower in an ionized space blows off the debris. The blown off debris is forcefully collected by a dust collector.

## **Table of Contents**

■For Your Safety ····· P.2
■Product Overview · · · · · · P.6
Dimensions ····· P.9
■Component Functions ····· P.10
Installation P.13
■Operation · · · · · P.19
■Maintenance ····· P.27
■Storage &Troubleshooting ····· P.33
Removing, Disposing of,
and Replacing Parts · · · · · · P.34
■Notice of CE Marking ····· P.35

## Safety Precautions

Please read this manual carefully before using this product.

Use this manual to take responsibility to ensure everyone that is using this product is doing so safely. After carefully reading this manual, keep it in a protected place where it can be used at any time.

The precaution items shown here are divided into two levels according to the level or risk.

Indicates that improper handling can lead to serious injury or even death.
Indicates that improper handling can lead to minor injury and property damage.

## OExample Pictorial Displays

$\bigtriangleup$	This symbol indicates a WARNING or CAUTION.
$\bigcirc$	This symbol indicates a prohibited action.
	This symbol indicates a mandatory required action

A WARNING		
	Do not use IPC40-E for anything other than static erasure or dust removal.	
Vacuuming Up Prohibited	<ul> <li>To prevent fires, absolutely do not vacuum up flames, explosive dust, or liquid mist containing dust such as the following.</li> <li>Items that are on fire: Cigarette butts, matches, and other sources of fire.</li> <li>Things containing sparks: A large amount of sparks from grinding, dust that includes cinders, etc.</li> <li>Flammable substances: Gasoline, thinner, benzene, kerosene, materials adhered with or containing oils, cleaning fluids, or flammable substances.</li> <li>Explosive substances: Explosive dust, such as aluminum, magnesium, titanium, and epoxy resin; explosive materials and dust or explosive liquids that can make dust explode depending on the conditions such as particle diameter and concentration; liquid mists or substances.</li> <li>Combustible substances: Combustible dust, combustible liquid mist, or materials adhered with or containing combustible materials, etc.</li> </ul>	

Vacuuming Up Prohibited	<ul> <li>Detrimental substances: Corrosive substances, adhesive substances, liquids containing adhesive substances, gases containing large quantities of detrimental substances, etc.</li> <li>Liquids and liquid mists: Dust containing moisture such as that generated by machine tools, etc.</li> </ul>	
Vacuuming Up Prohibited	To prevent an accident or malfunction, absolutely do not vacuum up damp dust or any moisture such as water or oil. Damp dust could clog the filter and make recovery impossible. Further, the product is not moisture or oil resistant, so an unforeseen malfunction or accident could occur due to corrosion, leaking, and dust accumulating in the internal duct.	
S Joint Use Prohibited	<ul><li>To prevent fires, absolutely do not make joint use of the following.</li><li>When the dust could transform into a hazardous substance when mixed inside the unit.</li></ul>	

▲ CAUTION		
Remember	<ul> <li>Take into consideration the conditions surrounding the installation area.</li> <li>Install the unit in an indoor location not subject to wind, rain, or direct sunlight.</li> <li>Where possibly wet by water, oil, chemicals, etc.</li> <li>Where exposed to marked vibrations or shock</li> <li>The temperature range should be 0°C to 40°C. Use the unit in a humidity range of 20 to 80%.</li> </ul>	
Remember	To prevent fires, conduct an inspection after work is completed.	
Remember	Be sure to correctly install the components. Leaks from defective installation could overload the motor and cause it to burn out.	
Remember	Store this manual close to the product where it can be referenced easily.	
	Do not install, use, or service this product until you understand this manual.	

⚠ WARNING		
	To prevent fires, only use the specified rated power source.	
S Painting Prohibited	Use as a painting booth is prohibited. Do not perform painting work in it.	
O Peering Prohibited	Do not peer into the end of the air nozzle. The sensor will detect your presence and blast out compressed air, which could strike your eyes or face.	
∆ WARNING		
O Disassembly Prohibited	<ul> <li>Do not remove components, or modify or unreasonably disassemble or assemble the product.</li> <li>This product is manufactured in accordance with safety and performance standards, so removing components or modifying the product is dangerous.</li> <li>Depending on the type of trouble, the customer might not be able to handle it, so always contact the store where the product was purchased.</li> </ul>	
O Acceleration Prohibited	Do not use an inverter to accelerate operation. Acceleration could overload the motor and pose a hazard in terms of the strength of rotating parts, etc. In addition, deceleration could cause a drop in blow volume, which could result in insufficient motor cooling.	
Remember	<ul><li>Be sure to observe the following to prevent electrical shock accidents.</li><li>Be sure to unplug the power cord from the outlet before performing any wiring.</li></ul>	

⚠ WARNING		
Remember	Be sure to turn off the power when the thermal protector operates and the operation stops. When the motor becomes overloaded, the thermal protector automatically operates to stop the motor, but since this is an automatic recovery type motor, if the power is left on, the motor could suddenly automatically restarting operating and leads to an accident. Turn off the power switch and main power supply before looking for the cause of the problem. Do not restart operation before identifying and eliminating the cause of the problem.	
Remember	Perform the processing quickly without letting dust accumulate. Depending on the conditions, dust could present a fire or explosion hazard.	
Remember	Be sure to unplug the power cord from the outlet before performing any maintenance or inspection work.	

The following prohibition and caution symbols are displayed on the product.

## OExample Pictorial Displays

	Sucking up sparks or flames is prohibited	Sucking up flammable or combustible substances is prohibited
	Sucking up explosive substances is prohibited	Disassembly Prohibited
	Be careful of electric shock	Be careful of rotating parts
i	Carefully read the instruction manual	No Peeking for Air Nozzle

## Features

## •Dust collecting unit with a static eraser

- This is a separate type static eraser dust collector where the work hood and dust collector are connected by a duct and a connection cord.
- The work hood and dust collector can be installed in separate, freely selected locations to make effective use of limited working space.
- The dust collector can be placed under the bench or in another location to muffle the noise.

## •Work hood

- · The entire top of the hood is made of transparent acrylic. This lets in light to provide good visibility.
- · The wide opening makes it easy to insert and remove long pieces of work.
- Connecting electrical power and the drive source to the static eraser dust collector maintains an environment filled with ions inside the hood.
- The sensor detects when work held by hand is placed inside the hood and automatically turns on the air blower.
- The dust is instantly removed from even large pieces of work by the two air nozzles that blow air from the left and right.

## •Dust collecting unit

- · Built-in high-performance filter for removing fine, dry dust. The exhaust does not dirty the room air.
- A closable clear acrylic window is provided in the front of the hood to block flying material and provide good visibility.
- · The opening has been optimally designed to allow the work to be smoothly put in and removed.
- · The dust collector filter can be easily replaced by removing the front cover.

## Safety

- The static eraser has a problem monitoring function that can be checked by looking at the illuminated indicators, etc.
- Equipped with a control circuit that first vents the air from inside the dust collector hood before turning on the static eraser power.

## **CE Marking**

We have certified our manufactured IPC40-E are designed and manufactured under the requirement of EU directive with following conditions:

OLow voltage Directive (73/23/EEC)

REQUIREMENTS : IEC/EN60335-1, IEC/EN60335-2-80, IEC/EN55014-1,

IEC/EN55014-2, IEC/EN61000-3-2, IEC/EN61000-3-3, IEC/EN60204-1

OPOLLUTION DEGREE : II

OIP Code : IP2X

## Protection Classification (IP) Labeling Examples



2nd signal 1st signal

Character signal

1st Signal	Protection against bodily contact with rotating parts or electrically charged parts or the insertion of solid objects
x	Does not apply (no instruction)
0	No protection
1	Protects against solid objects larger than 50 mm
2	Protects against solid objects larger than 12 mm
3	Protects against solid objects larger than 2.5 mm
4	Protects against solid objects larger than 1 mm
5	Protects against dust
6	Protects against dust

2nd Signal	Protection against entry by water
x	Does not apply (no instruction)
0	No protection
1	Protects against dripping water drops
2	Protects against water drops dripping within an angle 15° from the vertical
3	Protects against spattering water
4	Protects against splashed water
5	Protects against sprayed water
6	Protects against waves
7	Protects against soaking in of water
8	Protection when submerged in water

## ■Product Overview

Model No. Dust Collection Method Input Voltage Power Output	: IPC40-E : Cylindrical Cartridge Filter : Single-phase AC 230V (50/60Hz) : 200W		
Consumption Current	: 1.2A (50Hz)	1.4A (60Hz)	
Air Flow	: 3.3 m <sup>3</sup> /min (50Hz)	4.0 m <sup>3</sup> /min (60Hz)	
Static Pressure	: 0.88kPa (50Hz)	1.23kPa (60Hz)	
Wind Pressure	: 0.4 m/sec (50Hz)	0.5 m/sec (60Hz)	
Dust Collection	: 1.2L		
Air Pressure	: 0.4~0.7MPa (Use cle	ean air)	
Air Hose	$: \phi 6 \text{mm x} \phi 4 \text{mm}$		
Air Consumption		Pa, actual measurement))	
Working Temperature/ Humidity Range			
Noise	: Hood Front	63dB(A) (50Hz) 66dB(A) (60Hz)	
	Dust Collector Front	62dB(A) (50Hz) 65dB(A) (60Hz)	
Dimensions		W×462D×402H (mm)	
	Dust Collector 481W	V×354D×416H (mm)	
Weight	: Hood	12kg	
	Dust Collector	30kg	
Connection cord : Connector type Length 1.6 m			
Accessories	Accessories : Instruction Manual (this manual) 1cop.		
	Static eraser dust rem	over adjustment tool 1pc	
	Sensor plastic adjustn	nent tool 1pc	
	Dangerous use prohib	-	
	Clear acrylic sheet 1	•	
	Thumbscrews (M4-6)		
	Dust collection duct he	ose (1.6 m) 1pc	
<ul> <li>Specifications (Static Eraser)</li> <li>Model No. : SDJ-08</li> </ul>			
	Itaga AC aarona diaabar	20	
Ion Generation Method : High vol Output voltage :±3.5 KV	•	ye	
Input voltage : 24V DC			
Consumption Current : 200mA			
	200mA (typ.) 0.8 m²/ min. (max.) ⇔ 0.4 m²/ min.		
	( )	max. rating: 100 mA/ 50V	
		an lock alarm (Red LED)	
-	irrent protection fuse (1.		
		ection diode (1.0 A/ 400 V)	
	•	Inction (Detecting rotation lock)	
	Itage output drooping (D		
Working temperature/ Humidity Range	• • • • •	- ·	
Ozone generation		s measured at 300 mm, 30 sec.)	
Static electricity removal time	: About 2.9 sec. from $\pm 1,000 \text{ V} \Leftrightarrow \pm 100 \text{ V}$		
	(At 300 mm, maximu		
Ion balance	: Within $\pm$ 10 V (At 300	) mm, maximum air flow)	
# Dimensions









O Disassembly Prohibited	Absolutely do not replace the hood or dust collector with another device or use a substitute device. Do not remove components, or modify or unreasonably disassemble or assemble the product. This product is manufactured in accordance with safety and performance standards, so removing components or modifying the product is dangerous.

Please be sure to understand the components and functions of the dust collector work platform and to operate the unit safely and to work safely.

	Work Hood	
1. Work hood	This is a booth that improves the dust collection effectiveness of the dust removal work.	
2. Clear acrylic sheet	This plate keeps dust from dispersing during the dust removal work. It also lets in light from the top to allow the work surface to be clearly seen.	
3. Perforated plate	This is a work plate for use during the work. It prevents large objects from falling inside the chamber.	
4. Sensor + reflection plate	This senses when work is put in or removed and sends a signal to the air solenoid valve. For information about the sensitivity and timer, refer to the "Sensor" item under "Operation" in this manual.	
5. Air nozzles	Two flexible nozzles that can be pointed in any direction.	
6. Static eraser	This removes electrostatic charge. For information regarding the detailed operation of the SDJ-08 Static Eraser, refer to the "Static Eraser" item under "Operation" in this manual.	
7. Operation button	This button is located close to the dust collector and is used to start and stop the operation. A push button type main switch is attached to the dust collector.	
8. Air solenoid valve	This supplies or stops the compressed air in response to the sensor signal.	
<ol> <li>9. Duct connection port (exhaust)</li> </ol>	This connects the duct to the dust collector.	
10. Dust collection duct hose	Bellows type with a length of 1.6 m when extended.	
11. Connection cord	This is a 1.6 m long connection cord for connecting to the dust collector.	
12. Handle	This is used to hold the hood when moving it.	



Dust Collector	
13. Front cover	Removable opening through which the filter unit can be installed and removed.
14. Thumb lock	This lock is used to fasten the front cover.
15. Duct connection port (suction)	This connects the duct to the work hood.
16. Exhaust port	This is from where the clean air is exhausted.
17. Control box	This contains a circuit that turns on the static eraser dust collector about 7 sec after the operation switch is turned on.
18. Main switch	This switch turns the power to the control box on and off. It is a selector type switch.
19. Connector	This connector is for a connection cord that connects to the work hood.
20. Power cord	Cabtyre cord with insertion plug.
21. Draw tray	This tray collects the removed dust or dropped powder dust. The draw in the front cover is removed to dispose of the dust.
22. Fan motor	This is the drive unit that turns the fan. It has a built-in thermal protector. When the temperature inside the motor reaches approximately 120°C, the motor automatically stops, and when it cools again to approximately 80°C after stopping, it automatically restarts.
23. Fan	This generates speed and pressure in the air and provides vacuum force to the dust collector.
24. Filter unit	The filter unit removes dust.
25. Rear filter	This is installed in the rear cover as the unit's final filter.
26. Rear cover	This covers the area containing the fan.



Filter u	nit part names
24-1. Cylindrical cassette filter (non-cloth)	Number used by one unit: 1
24-2. Filter packing	Number used by one unit: 2
24-2	24-2

# **Installation Area**

⚠ WARNING	
	<ul> <li>Do not use this product in the following areas. Where there is a risk of an explosion or fire.</li> <li>Environments that require anti-explosion measures.</li> <li>Areas where corrosive gases or flammable or explosive gases are used.</li> </ul>

▲ CAUTION	
Remember	<ul> <li>Take into consideration the conditions surrounding the installation area.</li> <li>Install the unit in an indoor location not subject to wind, rain, or direct sunlight.</li> <li>Where possibly wet by water, oil, chemicals, etc.</li> <li>Where excessive vibration or shock is applied to the unit.</li> <li>Use in a temperature range of 0°C to +40°C. Use the unit in a humidity range of 20 to 80%.</li> </ul>
Remember	Do not use this product where it will be directly exposed to high temperatures or high humidity. Doing so could cause the motor to burn out or breakdown.

#### Installation Area

Install the unit in an indoor location not subject to wind, rain, or direct sunlight.

Avoid using the unit in areas where water, oil, or condensation will get on it or where it will be subject to sudden temperature changes.

Avoid using the unit where it will be subject to strong vibration or impacts.

An exhaust outlet is provided on the back of this unit, so placing the back of the unit close to the wall will prevent normal exhausting and decrease the dust collecting capability. Install the unit with its back at least 10 cm from the wall.

#### Ambient temperature and humidity

Use in a temperature range of 0°C to +40°C. Use the unit in a humidity range of 20 to 80%.

#### Atmosphere

Do not operate the unit in environments where anti-explosion measures are required.

Do not operate the unit in areas where corrosive gases or flammable or explosive gases are used. In addition, use the unit in a well ventilated area with a normal air atmosphere.

#### Input voltage and compressed air

This unit uses AC 230V (50/60 Hz) input voltage and 0.4 MPa to 0.7 MPa compressed air for the cleaning air. Install the unit where it can be connected to wiring and piping that meet these specifications.

#### Maintenance space

Space for maintenance and inspections should be maintained around the unit.

In particular, the space in front of the unit required for daily maintenance should be obtained.

# **Installation Method**

When installing this unit, place it on a level, strong, and smooth, flat bench.

Remember	To keep the unit from falling over, do not climb on the working surface or place heavy objects on it.
Remember	When installing the IPC40-E, place it on a level, strong, and smooth, flat bench. It can be damaged and malfunction if it falls.
	<ul> <li>Check the following, being aware of the weight of the product.</li> <li>Be sufficiently careful that no part of the body, especially fingers and toes, will be caught underneath the product while it is being installed or moved.</li> <li>Make sure the product does not fall over while it is being installed or moved.</li> <li>Do not move the product while an object is set on its hood. The object could fall off of the hood.</li> </ul>

#### Accessory Installation

Clear acrylic sheet installation

The work hood top acrylic sheet is removed from the hood and packed to prevent it from being broken during product shipment. Before using the unit, install the clear plastic sheet using the included 6 thumbscrews.

The position of the thumbscrews is shown in the figure at right.



⚠ WARNING	
Remember	The work hood tope clear acrylic sheet prevents dust from being dispersed during dust collection. The included clear acrylic sheet should always be installed while working.

#### Dangerous use prohibited card application

The person in charge of controlling the use of this product must agree with the "Dangerous use prohibited" items written on the included dangerous use prohibited card.

This person must sign on the signature line of the card and affix it to the side of the work hood or other place clearly seen.



#### Connecting the work hood and dust collector

When the installation location has been decided, connect the connection cord coming from the work hood and the included dust collection duct hose.

	To prevent electrical shock accidents, be sure to unplug the power cord from the outlet before performing any wiring.
Remember	
Remember	To ensure safety, the work hood and dust collector shall be set up as prescribed by this manual. Do not remove components, or modify or unreasonably disassemble or assemble the product. This product is manufactured in accordance with safety and performance standards, so removing components or modifying the product is dangerous.
Remember	Do not attach extensions to the dust collection duct hose or the connection cord. Doing so could cause the timer setting of linked equipment not to match, preventing correct operation.

▲ CAUTION	
	Firmly connect the dust collection duct hose and the connection cord so that they do not come loose during operation. Checking/inspecting these before starting work are recommended.

Dust collection duct hose connection

Connect the included dust collection duct hose to the exhaust port on the rear of the work hood and the suction port on the top of the dust collector. The connection positions are shown in the figures below.



#### Connection cord connection

Connect the connection cord coming from the rear of the work hood to the connector on top of the dust collector. A connector is used to make it easy to connect to the dust collector. The connection position is shown in the figure at right.



# Compressed air piping

	ZIN CAUTION
Remember	Be sure to use an air hose with sufficient pressure resistance
	performance. A hose without pressure resistance could burst or leak air.

#### Compressed air used

This unit requires that clean compressed air be supplied to the dust removal air blower. Supply air within the pressure range of 0.4 to 0.7 MPa.

\*A pilot solenoid valve is used to assist the operation of the valve used to supply the compressed air, and it will not operate properly if the supply pressure is too low.

Use an air drier to remove the moisture from the air. (The dew point temperature is -15°C or lower.) Use mist separator (0.3  $\mu$ m) to remove the impurities from the air. Supply air within the temperature range of 0 to +40°C.



#### Hose used

Use an air hose with sufficient pressure resistance performance (outside diameter 6 mm x inside diameter 4 mm).

#### Hose connection

Connect the hose to the one-touch hose coupling (compressed air supply opening) on the bottom of the solenoid valve on the back of the work hood. Refer to the following figure.



# **Electrical power wiring**

	⚠ WARNING
Remember	Use IPC40-E only with 230V AC(50/60Hz). Use of other voltage may result in fire and electric shock.
Remember	To prevent electrical shock accidents, be sure to unplug the power cord from the outlet before performing any wiring.
Remember	To prevent electrical leaks, electrical shocks, and fire accidents, perform the wiring work in accordance with electrical equipment technology standards and in-house wiring provisions.

#### Check the specifications

Check to make sure the specifications of the supplied power makes the unit's power specifications.

#### Wiring circuit breaker

Use a wiring circuit breaker to prevent overloading. It is also recommended that a ground-fault interrupter be installed.

#### Extension cord

When an extension cord is used to supply power from a distant location, if the core wire of the extension cord is narrow, it could cause a voltage drop and make it difficult for the unit to start and prevent the capacity from being fully realized, so make sure the extension cord has sufficient capacity to carry the electrical load. In addition, carrying a current that exceeds the allowable current value could damage the cord's insulation.

#### Power cord

The power cord comes with a plug, so plug it completely into the oulet (230V AC).



#### Static eraser

The static eraser's operation mode selector switch is set to automatic operation to link operation with this unit.

#### Duct piping

#### Exhaust port

An exhaust port is provided on the rear of the dust collector.

The flange for connecting ducts with a 100 mm inside diameter is an option.

\*Please be aware that connecting a duct will reduce the dust collecting capability.

# Operation

Before starting operation, double check to make sure all of the installation items are being observed. Make sure there are no problems with the unit.

- · Is there any damage, loose screws, or loose connectors?
- · Are all of the front and rear covers completely shut?
- Have the dust collection duct hose or connection cord come loose?

# Operation

Operation is performed using the Start (green) and Stop (black) push buttons on the front of the work hood.



The selector switch on the front of the dust collector is the main switch. Turn this from OFF ( $\circ$ ) to ON ( | ) before beginning operation.



- · Use a wiring circuit breaker (for the motor) to prevent overloading.
- In this case, use one that is suitable for the motor (suitable for the current value).
- · It is also recommended that a ground-fault interrupter be installed.

⚠ WARNING			
Remember	Be sure to turn off the power when the thermal protector operates and the operation stops. When the motor becomes overloaded, the thermal protector automatically operates to stop the motor, but since this is an automatic recovery type motor, if the power is left on, the motor could suddenly automatically restarting operating and lead to an accident. Be sure to turn off the switch and unplug the power cord from the outlet before looking for the cause of the trouble. Do not restart operation before identifying and eliminating the cause of the trouble.		

### Perforated plate

This is used as a work platform. It prevents large-diameter objects from falling inside the unit.

▲ CAUTION		
	Do not use the unit with this plate removed.	
	The sensor might not work properly.	
	If the perforated plate is deformed or broken while performing work,	
∧ CAUTION	continuing to use the product in this condition is hazardous, so make	
	sure the perforated plate is properly maintained.	
	Replacing the deformed or damaged perforated plate is recommended.	
	This unit is designed for light work, such as handwork, so do not place	
Remember	heavy objects on top of the perforated plate or forcefully strike it.	
	Doing so could deform or break the perforated plate.	
	The perforated plate is designed to support up to 10 kg.	

#### **Operating conditions**

Perform operation under the following conditions.

Keep the power voltage within the allowable fluctuation range of within  $\pm 10\%$ .

The frequency range shall be the rated frequency stated on the name plate.

Do not use an inverter to operate the unit.

The unit is designed to provide the specified performance when operated at the rated frequency. Acceleration could overload the motor and pose a hazard in terms of part strength, and deceleration could cause insufficient motor cooling.

O Prohibited	Using an inverter to acceleration operation could overload the motor and pose a hazard in terms of the strength of rotating parts, so absolutely do not do it.	

# **Dust conditions**

Observe the following conditions for the dust that is handled.

This unit is for use with regular dust. It can be used to blow off dry fine dust with compressed air. Absolutely do not vacuum up wet dust, liquids like water, oil or spray mist. Also absolutely do not vacuum up dust containing explosive, flammable, or combustible substances.

•Do not vacuum up adhesive or corrosive substances.

• To prevent fires, absolutely do not vacuum up flames, explosive dust, or liquid mist containing dust such as the following.

- Items that are on fire: Cigarette butts, matches, and other sources of fire.

- Things containing sparks: A large amount of sparks from grinding, dust that includes cinders, etc.

- Flammable substances: Gasoline, thinner, benzene, kerosene, etc. Materials adhered with or containing oils, cleaning fluids, or flammable substances.

 Explosive substances: Explosive dust, such as aluminum, magnesium, titanium, and epoxy resin; explosive materials and dust or explosive liquids that can make dust explode depending on the conditions such as particle diameter and concentration; liquid mists or substances adhered with or containing explosive substances.

- Combustible substances: Combustible dust, combustible liquid mist, or materials adhered with or containing combustible materials, etc.

•Do not vacuum up flammable dust or dust containing flammable substances.

Caution must be taken in particular with non-combustible substances that change into combustible substances when worked on, etc.

It is very difficult to determine if such substances are changing into combustible dust, so we ask the customer to be responsible for making this determination. In addition, if a substance is determined to be combustible dust, immediately stop using this unit.

•Even if the individually handled dusts are safe, they may change into a hazardous substance when mixed together. Caution is especially required for substances the change when mixed, so we ask that the customer be responsible for checking this.

If the safety of mixed dust cannot be determined, absolutely do not use the same machine for both kinds of materials.

Since an unexpected problem could occur in the disposal of mixed collected dust, we ask that the customer be responsible for making this determination.

Absolutely do not vacuum up damp dust or any moisture such as water or oil.

Collecting dust wet with a liquid or dusting containing a liquid could clog the filter and make operation recovery impossible and, since the product is not moisture or oil resistant, so an unforeseen malfunction or accident could occur due to corrosion, leaking, and dust accumulating in the internal duct.

⚠ WARNING		
Vacuuming Up Prohibited Absolutely do not vacuum up sparks; flammable, explosive combustible dust; or dust containing or mixed with explosive flammable, or combustible substances.		
Vacuuming Up Prohibited	Absolutely do not vacuum up explosive, flammable, or combustible liquids or dust wet with such liquids, or dust mixed with or containing such liquids.	
Vacuuming Up Prohibited	To prevent an accident or malfunction, absolutely do not vacuum up damp dust or any moisture such as water or oil. Damp dust could clog the filter and make recovery impossible. Further, the product is not moisture or oil resistant, so an unforeseen malfunction or accident could occur due to corrosion, leaking, and dust accumulating in the internal duct.	
Solution       Joint Use Prohibited         Use in the same unit of substances that change into a has substance when mixed is prohibited.         Even if the individually handled dusts are safe, they may into a hazardous substance when mixed together. Cautie especially required for substances the change when mixed together. Cauties we ask that the customer be responsible for checking the the safety of mixed dust cannot be determined, absolute use the same machine for both kinds of materials.		

# Static Eraser

Static eraser

Pressing the Start button (green) on the work hood turns on the dust collector, and this also turns on the linked static eraser 7 sec later. Pressing the Stop button (black) stops the static eraser at the same time as the dust collector.

\*The static eraser is linked to the dust collector, so the static eraser's operation mode selection switch is set to automatic operation.

⚠ WARNING		
Unplug the power cord	To prevent electrical shock accidents, be sure to unplug the power cord from the outlet before inspecting the static eraser.	

▲ CAUTION		
Do not remodel or disassemble the IPC40-E. The IPC40-E con high voltage parts.		
Open PROHIBITED         Do not block openings such as the intake vent and the discharge vent. Doing so could cause a malfunction.		
Do not insert metal or foreign matter into the unit openings.           Doing so could result in electrical shock accidents or equipmer breakdown.		
Unplug the power cable	Before long periods of disuse, unplug the power cable. Leaving the power on during periods of disuse can result in electric shock, breakdown and fire from degraded insulation.	

#### Automatic operation (This is the setting at the time of shipment)

#### Start

- (1) Turn the operation mode selector switch to "▲ AUTO."
- (2) When the power is turned on, the power indicator lights up and automatic operation begins. The fan turns and ions are generated.

#### Pause

(1) Pressing the power ON/OFF switch once during operation stops the supply of electricity and pauses operation.

#### Stop

(1) Turning of the main unit power also turns off the static eraser at the same time.

F	ALARI AN	M HLV	POWER	on/ Off 🛈	FAN SPEED	▲ AUTO ▼MANL
4	5-	0	0		Ð	Ð
ON/OF	Fsw	/itcl	h /			
Fan sp	eed	vol	ume	<u></u> M	ode sele	ctor switch

#### Manual operation

#### Start

(1) Turn the operation mode switch to "▼ MANL".

(2) When the power is turned on, press the power ON/OFF switch once to cause the power indicator to turn on and operation to start. The fan turns and ions are generated.

#### Stop

Pressing the power ON/OFF switch once during operation stops the supply of electricity and stops operation. In addition, turning off the main unit power also turns off the static eraser at the same time.

#### Blow volume adjustment

Turning the blow volume control to the left lowers the blow volume. Turning it to the right increases the blow volume. Use the included screwdriver to make the adjustments.

▲ CAUTION		
Remember	The control adjustment rotation range is about 270°. Do not use excessive force when using the screwdriver to turn it. Using excessive force could break the control.	

#### "NEEDLE CLEAN "Warning Lamp"

Operation Lamp blinks every 100-hour use for IMMEDIATE CLEANING, periodical cleaning of needle every 100-hour operation. (See Page. 32)

\*lonizing operation can be continued during the blinking.

\*After the cleaning, please keep pressing ON/ OFF switch for more than 3 seconds, then resetting the accumulative operation hours recorded and no blinking. (Accumulative running hours won't be faded nor resetting even if power supply suspended.)

#### Warning Indicator

- (1) Abnormal high voltage warning indicator: This illuminates when the high-voltage output is abnormal.
- (2) Fan lock warning indicator: This illuminates when the fan motor stops turning.

When a warning indicator illuminates, unplug the product and check the following points.

- (1) Is foreign matter adhered close to the discharge needle?
  - → Refer to maintenance for the "Static Eraser" item under "Maintenance."
- (2) Is foreign matter caught in the fan motor?
  - → After removing the cause, turn on the power again, and check if the warning indicator has turned off.

\*If the warning indicator illuminates again, have the unit repaired by the product was purchased. \*If the warning indicator has turned on, the static eraser's power ON/OFF switch will not operate. Turn the No. IPC40-E's operation switch to stop (○) and wait about 5 sec before turning it on again.

#### Sensors

These are regression reflection beam sensors that are located on the right and left side of the work hood opening. When the work is held by hand and placed in the hood, the sensors detect the work and open the air solenoid valve.

\*Sensor is set to "Off delay timer mode: approx. 3 sec" at shipment.

This mode continues output for just the time the set time is extended after the detection signal is off.

\*The timer time is adjusted at shipment, but the included plastic adjustment tool can be used to make fine adjustments.

# A WARNING

	To prevent electrical shock accidents, be sure to unplug the power
Unplug the power cord	cord from the outlet before inspecting the static eraser.

▲ CAUTION		
O Disassembly Prohibited Do not modify or disassemble the product.		
Remember The sensitivity and timer are set at the time of shipment. Do not change the settings unnecessarily. When making fine adjustme use the included sensor adjustment tool. When making adjustme turning the control with excessive force could damage it.		

#### Timer setting method

The output time can be adjusted by adjusting the timer to extend the time after the detection signal is off.

- (1) Use the adjustment tool to loosen the sensor cover installation screws and then remove the sensor cover.
- (2) Use the included adjustment tool to make fine adjustments by turning the timer (TIME) control. Turning left shortens the time and turning right lengthens the time.
- (3) After making the adjustment, securely replace the sensor cover and tighten the sensor cover installation screws.



# Compressed air flow volume adjustment valve

There is a "flow volume adjustment valve" on the secondary side of the "solenoid valve" located on the rear of the unit.

The compressed air that is blown from the air nozzle can be adjusted to be stronger or weaker.

\*This is set to the maximum blow volume at the time of shipment.



# Maintenance

# **Pre-work Inspection**

Inspection Location	Inspection Description	Measures
Main unit	Dust accumulation condition	Dust disposal processing
	Main unit wear, corrosion, and damage.	Repair by manufacturer
Work hood	Main unit wear, corrosion, and damage.	Repair by manufacturer
Perforated plate	Deformation or damage that interferes with work	Replace
Clear acrylic sheet	Scratches, dirtiness, or damage that makes it difficult to set the work area inside the hood	Replace
Seal packing	Air leaks or dust leaks in the main unit or duct piping	Replace
Drawer tray	Dust accumulation condition	Dust disposal processing
	Filter body clogging, damage, deterioration, dampness,	Remove the dust or
Filter unit	etc., and deteriorated, damaged, or missing packing	replace the filter unit
Power plug	Is it completely plugged into the outlet?	Plug it in properly
Operation switch	Damaged, missing, or malfunctioning	Repair by manufacturer
Fan	Abnormal vibration	Repair by manufacturer
Bearing	Making of abnormal sounds	Repair by manufacturer
Sensor	Is it operating normally?	Repair by manufacturer
Solenoid valve	Is it operating normally?	Repair by manufacturer
Compressed air nozzle	Is it operating normally?	Repair by manufacturer
Static eraser	Is it operating normally?	Repair by manufacturer

Inspection Location	Inspection Description	Measures
Drawer tray	Dust accumulation condition	Dust disposal processing
Filter unit	Filter body clogging, damage, deterioration, dampness, etc., and deteriorated, damaged, or missing packing	Remove the dust or replace the filter unit
Main unit	Dust accumulation condition	Dust disposal processing
Motor	Abnormal heat generation	Repair by manufacturer

# Post-work Inspection

# Periodic Inspection Perform about once a month. This is performed by the manager.

Inspection Location	Inspection Description	Measures
Power cord (plug)	Is there any deformation or scratches?	Repair by manufacturer
Control box	Are the installation screws or other components loose or missing? Are parts damaged or	Be sure to turn off the switch and
Sensor		unplug the power cord before
Solenoid valve		tightening or installing screws,
Compressed air nozzle		etc. Replace or have the
Static eraser		manufacturer repair damaged or
		deteriorated parts.

# **Dust Removal and Disposal**

If the vacuum force appears to have dropped during use, the internal filter unit is clogged, so use the following procedure to remove the dust. When doing this, flammable dust could catch fire or explode under certain conditions, so quickly dispose of the accumulated waste.

Remember	Quickly dispose of the dust without letting it accumulate. Even if the dust is non-flammable, the dust could catch fire or explode depending on the particle size, concentration, or other conditions, so be careful when removing any kind of dust.	
Remember	Since an unexpected problem could occur in the disposal of mixed collected dust, we ask that the customer be responsible for making this determination.	
▲ CAUTION		
Remember	To prevent a fire accident, always check the dust after conducting work that generates sparks, etc., and inspect the unit before concluding the work for the day.	
Remember	If the front cover is not attached properly, the vacuum force could drop or overloading could cause the motor to burnout, so make sure the cover is attached properly.	

# Cleaning the filter unit (Removing dust)

(1) Turn off the power

Switch the main switch to OFF  $(\circ)$  to turn off the power and always confirm that the fan has completely stopped rotating. Not doing so could stir up the fine dust that has been collected.

- (2) Open the front cover
- (3) Remove the filter
- (4) Remove the dust
- (5) Dispose of the dust
- (6) Install the filter
- (7) Close the front cover

Remove the internal filter unit. Remove the filter unit dust.

Unlock the thumb lock and take off the front cover.

Dispose of the dust in the draw tray.

Install the filter unit back in its original location.

Insert the front cover and completely close the thumb lock. If the front cover is not properly installed, it could cause the vacuum force to drop or overload the motor and cause it to burn out.



# Cleaning the rear filter

The rear filter is located inside the rear cover. Clean it as required.

(1) Turn off the power.

Switch the main switch to OFF  $(\circ)$  to turn off the power and always confirm that the fan has completely stopped rotating. Not doing so could stir up the fine dust that has been collected.

Loose the 4 screws on the rear cover and remove the rear cover.

Remove the rear filter that is inserted into the guide vanes.

- (2) Loosen the screws.
- (3) Loosen the wing nuts.
- (4) Remove the rear filter.
- (5) Remove the dust.
- (6) Clean up the dust.
- (7) Reinstall the rear filter.
- (8) Attach the guide vanes
- to the rear cover. (9) Close the rear cover.

Reinsert the rear filter into the guide vanes.

Loosen the 4 wing nuts inside the rear cover.

Tighten the 4 wing nuts to attach the guide vanes to the rear cover.

Tighten the 4 screws to attach the rear cover.



# **Filter Replacement**

If the filter has become damaged or if after long use the vacuum force does not recover even after the dust is removed, use the following procedure to replace the filter. (Filters can be purchased through the product was purchased.)

Remember	Make sure the fan has completely stopped rotating before replacing the filter. In addition, sufficiently monitor the power so that the fan is not accidentally turned on while the filter is being replaced. If the fan is on, it will vacuum in things or blow them around, which could cause an accident.	
▲ CAUTION		
Remember	If the front cover is not attached properly, the vacuum force could drop or overloading could cause the motor to burnout, so make sure the cover is attached properly.	

## Cleaning the rear filter

The rear filter is located inside the rear cover. Clean it as required.(1) Turn off the power.

(2) Loosen the screws.

- (3) Loosen the wing nuts.
- (4) Remove the rear filter.
- (5) Remove the dust.
- (6) Clean up the dust.
- (7) Reinstall the rear filter.

(8) Attach the guide vanes to the rear cover.

(9) Close the rear cover.

Switch the main switch to OFF  $(\circ)$  to turn off the power and always confirm that the fan has completely stopped rotating. Not doing so could stir up the fine dust that has been collected.

Loose the 4 screws on the rear cover and remove the rear cover. Loosen the 4 wing nuts inside the rear cover.

Remove the rear filter that is inserted into the guide vanes.

Reinsert the rear filter into the guide vanes.

Tighten the 4 wing nuts to attach the guide vanes to the rear cover.

Tighten the 4 screws to attach the rear cover.



# **Clear Acrylic Sheet Replacement**

If the clear acrylic sheet in the hood front or rear becomes scratched or dirty such that it makes it difficult to see inside the hood, use the following procedure to replace the clear acrylic sheet. (You can purchase it from the store where the product was purchased by specifying either the front or rear clear acrylic sheet of IPC40-E.)

- (1) Loosen the screws.
- (2) Remove the acrylic sheet.
- (3) Attach the acrylic sheet.
- (4) Tighten the screws.

Loosen the 6 thumbscrews.

- Remove the acrylic sheet.
- Attach the new acrylic sheet.
- Tighten the 6 thumbscrews.

The screw positions are shown in the figure below.



## **Static Eraser Maintenance**

The static eraser is nearly maintenance free, but occasionally clean the case, filter, and electrode wires. Dirtiness or wearing around the electrode wires could cause a decline in static electricity erasing capability. In addition, it is recommended that the ion balance be measured to check for a drop in capacity.

Unplug the power cord	To prevent electrical shock accidents, be sure to unplug the power cord from the outlet before inspecting the static eraser.

# ▲ CAUTION

O Do not disassemble	Do not remove the finger guard. Failure to do so can result in
	electric shock and breakdown.
	Do not wipe with detergent or solvent. Substances of the sort
♥ Prohibited	can cause cracking and result in electric shock or breakdown.
	Do not wet the IPC40-E. Contact with moisture can result in
$\bigotimes$ Do not wet	electric shock or breakdown.
	Periodically check the IPC40-E. Failure to perform checks can
Check	result in early breakdown.

#### How to Clean the Electrode Wire

Clean the electrode wire about every 100 hours of use. To prevent electrical shock accidents, be sure to unplug the power cord from the outlet and wait at least 1 min before cleaning the electrode wires. Insert a cotton swab into the clearance on the finger guard to clean the electrode wire. If the electrode is heavily contaminated, clean it with a cotton swab with a little alcohol and remove the stuck dirt. Do not rub the electrode wire hard for cleaning. Failure to do so can result in a bent wire. Wipe it lightly.



#### How to Replace the Electrode Wire

Do not replace the electrode wire with a new one by yourself. Contact the store where the product was purchased.

#### Static Erasing Capacity Check

Measure ion balance and charge voltage-dampening time using a charge plate monitor. Reference: IEC61340-5-1 • 2, ANSI EOS/ ESD S3.1

#### Adjustment

Because ions are generated with AC output, the SDJ-08S does not have an adjustment feature of ion balancing. If ion balance is not good, contact the store where the product was purchased.

#### **Cleaning the Case**

Use a well-wrung, soft cloth soaked with water to clean the case. Do not use cleaners or other substances containing surface-active agents as these could have a negative impact on the static electricity erasing performance.

# Storage

O Prohibited	<ul> <li>Do not store the IP40-E in the below environments.</li> <li>Adverse environments can result in explosion, fire, electric shock and accident.</li> <li>Where explosion-proofing is required, where found flammable atmospheres</li> <li>Where excessive vibration or shock is applied to the eraser.</li> <li>Where temperature and humidity are outside specified ranges.</li> <li>Where dewing or sharp temperature fluctuations occurs.</li> <li>Where there is heavy dust or smoke, where possibly wet by water, oil, chemicals, etc.</li> <li>Where strong electric or magnetic fields are generated.</li> </ul>

# Troubleshooting

# **Trouble Measures**

Be sure to unplug the power cord from the outlet before looking for the cause of the trouble. Request repairs at the store where the product was purchased.

Trouble Description	Cause/ Inspection	Measures
The specified performance	Power specifications do not match	Match the rated specifications
is not obtained	Damaged or clogged filter unit	Replace with a new component
	Defective power connection	Perform the wiring correctly
	Thermal protector has operated	Use power voltage that is in a
		range of ±10%
Motor does not turn	merma protector has operated	Make sure all covers are closed
		completely to prevent air leaks
	Switch is broken	Repair by manufacturer
	Motor is burned out	Repair by manufacturer
There is abnormal noise or	The impeller is not balanced properly.	Repair by manufacturer
vibration	Bearing	Repair by manufacturer
Dust is exhausted	Damaged or clogged filter unit	Replace with a new component
	Inspect the seal packing	Inspect the seal condition and
		replace if necessary
	Filter unit installed improperly	Set it in the proper position after
		inspection
Dust collecting capability		
does not recover even after	Clogged filter unit	Replace with a new component
servicing the filter unit		
Sensor does not function	Internal component is broken	Repair by manufacturer
Solenoid valve does not	Internal component is broken	Repair by manufacturer
function		
Static eraser does not	Control circuit is broken	Repair by manufacturer
function	Internal component is broken	Repair by manufacturer

## Removal

When removing this product, first make sure the surrounding area and other workers are safe.

▲ CAUTION		
Unplug power cable	To prevent electrical shock accidents and operational mistake accidents during the product removal work, be sure to unplug the power cord from the outlet.	
Remember	When disconnecting a compressed air hose, be sure to first shut off the source of the compressed air. In addition, the compressed air inside the air hose could spray out when the air hose is disconnected, so keep the hose away from the face, etc., when disconnecting it.	
Remember	To keep the unit from falling over, do not climb on the hood or dust collector or place heavy objects on them.	
Remember	<ul> <li>Check the following, being aware of the weight of the product.</li> <li>Be sufficiently careful that no part of the body, especially fingers and toes, will be caught underneath the product while it is being removed or moved.</li> <li>Make sure the product does not fall over while it is being removed or moved.</li> <li>Do not move the product while an object is set on its hood. The object could fall off of the hood.</li> </ul>	

# Disposal

#### Disposal

When disposing of this product, dispose of it properly in accordance with the pertinent laws and local regulations.

# ■Replacement Parts

# **Replacement Parts**

There are 3 consumable parts that can be replaced by the customer.

Check the model and lot No. and then purchase the parts through the store where the product was purchased.

Filter unit part No. (22)
Front clear acrylic sheet part No. (2)
Rear filter part No. (25)

IPC40-E		CE RoHS
230V~	IP2X	No. 000000
50/60Hz	200/280W	INDOOR USE
7-25, Fukae )saka 537-00		Higashinari-ku

For information about the replacement procedure, refer to the "Maintenance" item in this manual.

# LIMITED WARRANTY:

VESSEL expressly warrants that for a period of one (1) year from the date of purchase, VESSEL static erasers will be free of defects in material (parts) and workmanship (labour). Within the warranty period, Defects occurring will be repaired or products will be replaced at VESSEL's option and expense, if VESSEL receives notice during the warranty period. Defective products must be returned to VESSEL Osaka Japan with proof of purchase date. And if your unit is out of warranty, VESSEL will quote repair charges necessary to ship your unit freight prepaid to where you have originally purchased.

# WARRANTY EXCLUSIONS:

THE FOREGOING EXPRESS WARRANTY IS MADE IN LIEU OF ALL OTHER PRODUCT WARRANTIES, EXPRESSED AND IMPLIED, INCLUDING FITNESS AND MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH ARE SPECIFICALLY DISCLAIMED. The express warranty will not apply to defects or damage due to accidents, neglect, misuse, alterations, operator error, or failure to properly maintain, clean, or repair products.

# LIMIT OF LIABILITY:

This electronic static eraser use high voltage corona discharge and should not be used in or near flammable or explosive environments. In no event will VESSEL or any seller is responsible or liable for any injury, loss or damage, direct or consequential, whether based in tort or contract arising out of the use of or the inability to use the product. Fulfillment of VESSEL's warranty obligations will be Customer's exclusive remedy and VESSEL's and Seller's limit of liability for any breach of warranty or otherwise. Before using this unit, users shall determine the suitability of the product for their intended use, and users assume all risk and liability whatsoever in connection therewith.

	CERTIFICATE OF INSPECTION	
	SERIAL NO.	
We hereby cert	ify that before shipment, above tool has been carefully	
inspected acco	ording to our factory engineering standard and the result has come ou	t
in satisfactory	data. In order to maintain the best conditions of this tool, please be	
sure to take a f	ew minutes to read through the enclosed instruction manuals and operate	;
as recommende	ed.	
DATE:	CHIEF INSPECTOR:	
MANUFACTUR	ed by <b>VESSEL CO., INC.</b> OSAKA JAPAN	

Manufactured by:

# VESSEL CO., INC.

Higashinari-ku, Osaka 537-0001 Japan Tel : +81 6 6976 7778 Fax : +81 6 6972 9441 E-mail : export@vessel.co.jp URL : http://www.vessel.jp

> Printed in Japan 20070905