

VESSEL

AIR CORNER DRILL
GT-CD60-34/CD60-34L

Instruction Manual

VESSEL Co., Inc.

For Safe Use

Thank you very much for having purchased the "VESSEL Air Corner Drill GT-CD60-34 / CD60-34L."

Please read this manual carefully and understand its contents for the safe and correct use of the air tool.

Warning: Read these instructions carefully before operating, maintaining or servicing this tool.

- The following icons represent the degree of danger that can be induced by user's action or environment. Please observe all the instructions presented in this manual as they are important for personal and public safety.
- △ Warning Indicates possibility of serious or fatal injuries when instructions are not followed.
- △ Caution Indicates possibility of injuries or property damage when instructions are not followed.
※ Depending on circumstances, failure to follow the instructions given in the "Caution" section could lead to serious consequences.
- Please keep this manual for your ready reference.
- In case this manual or any of the warning labels attached to the unit are lost or damaged, contact us or the local distributor for replacement.
- Please make sure this manual be kept with the unit when it is handed over or lent out to a third party.

If you have any inquiries about this product or manual, please contact us or your local distributor.

△ **Warning Please read this manual carefully and understand the contents fully before use.**

△ **Warning** ■ **Compressed air management**

● **Specified air pressure should be applied.**

Excessive air pressure may lead to serious accidents or property damages. Install proper equipment including a pressure gauge and a reduction valve in order to keep the dynamic pressure at the tool end within the specified range.

● **Only compressed air should be applied.**

The air impact wrench is a tool driven by normal compressed air. There will be a risk of explosion if other high-pressure gases like oxygen, acetylene, and propane are used for the tool.

- **Choose the appropriate air hose.**

Use oil- and abrasion-resistant air hoses for the required air pressure and of the recommended inner diameter. Avoid using deteriorated or excessively long hoses.

- **Prevent air leakage.**

Make sure that air plugs be firmly attached to the air hose. If the air hose comes off due to loose connection, it will bounce around by the force of compressed air and may cause personal injuries or property damages.

⚠ **Warning ■ Work environment**

- **Keep the work area clean and bright.**

Dark or cluttered work environment leads to accidents. Keep the area tidy and well-lit.

- **Do not use the air tool in explosive atmosphere.**

This unit may create sparks, which may cause explosion.

⚠ **Warning ■ Work clothes**

- **Wear appropriate work clothes.**

Do not wear baggy clothes, accessories, etc, which might be caught in revolving parts. Long hair should be tucked under a cap to keep it away from the tool.

- **Wear protective gears.**

Wear protective gears suitable for the task, including a helmet, protective goggles, earplugs, a dust mask, anti-vibration gloves and safety shoes, etc.

⚠ **Warning ■ General precautions**

- **Handle the unit with care.**

Do not throw or drop the unit as it will damage the parts and lead to accidents and malfunction.

- **Beware of moving parts.**

Keep your hands and cloth away from the moving parts as they may be caught in them.

- **Keep a good posture while working.**

Keep a good posture and hold the tool firmly in case of an unexpected situation.

- **Avoid accidental start-up.**

Make sure the trigger is released before connecting the air hose to the unit. Be careful not to press the trigger when carrying the air tool.

- **Keep the tool away from electricity.**

The air tool is not insulated against electricity.

- **Stop using the tool if you notice any abnormalities.**

If you notice any abnormalities, stop using the tool immediately and contact us or your local distributor for maintenance, inspection, and repair.

- **Fix the object steady.**

Please fix the object steady when you work. It will damage drill or drill bit if the object is not fixed well.

- **Do not put excessive force on drill bit.**

Drill bit will be damaged when it is put excessive force or used by unproper angle.

Please stop air supply and take out the tool when the drill get jammed.

- **Use proper drill bit.**

- **Do not touch drill bit until the rotation stop after use.**

- **Do not make tool idle running.**

Do not make tool idle running with drill bit.

△Warning ■Miscellaneous

- **Use the tool only for its intended applications.**

It may lead to an unexpected accident if the tool is used for purposes other than those specified in the manual.

- **Do not attempt any modification.**

Do not modify the unit. Any modification will void the warranty and may cause a hazardous situation.

- **Do not remove any parts.**

Also, do not use the tool if any of its parts or screws has been removed or missing. It may result in a hazardous

situation.

- **Shut off the air supply and detach the air hose from the tool;**
 - when the tool is not in use
 - when the tool is kept in storage
 - when maintenance is performed
 - when the tool tip (bits / sockets) is replaced
 - when there is any sign of danger or malfunction

⚠ **Caution** ■ **Basic precautions for operating air tools**

- **Pay attention.**

Stay alert while using the air tool and do not act thoughtlessly. Also, avoid using the tool when you are tired or under the influence of drug, alcohol, or medication.

- **Keep bystanders away.**

Do not let bystanders get close to your operation. Especially, children should be kept away.

- **Do not overload the air tool.**

If the tool is operated beyond the specified output range, it will damage the tool and lead to malfunction.

- **Pay attention on back action.**

Pay attention on back action during drilling work.

- **Pay attention not to injured by sharp drilled hole.**

- **Beware of the exhaust port.**

Direct the exhaust air away from your eyes and ears. Otherwise, it can cause accidents or diseases as it contains oil and it may blow grit or other debris in your face.

- **Handle the tool with care.**

Do not throw or drop the tool. It may lead to damage or malfunction if it is handled roughly or forcefully.

- **Keep bystanders away.**

Do not let bystanders get close to your operation. Especially, children should be kept away.

- **Do not abuse the air hose.**

Do not carry, raise or lower the tool by the air hose. Damaged hoses increase the risk of accidents.

For Safe Use

- **Do not drop the tool from a high place.**

Equipment like a safety strap should be used to prevent the tool from falling when working at high places.

- **Store the tool in a safe place.**

If the tool is not to be used for a period of time, conduct maintenance and keep it in a safe, dry place. It should be kept out of the reach of children.

- **Be aware of laws.**

There are laws and regulations that may regulate or limit the use of this product. Please make sure that the use of this product does not violate any laws and regulations.

- **Take breaks.**

Continuous work without taking appropriate breaks could lead to illness, take breaks as required. If you feel abnormalities, such as pain, immediately stop using the tool and consult a physician.

⚠ **Caution** ■ **Maintenance, inspections and repairs**

- **Check before use.**

Make sure the unit has no loose screws/bolts and fittings and no damaged parts. If the unit is operated despite such problems, it could lead to a hazardous situation as well as decrease the performance.

- **Conduct inspection and maintenance regularly.**

Regular inspection and maintenance are necessary for safe and efficient performance of the tool.

- **Please contact us or the local distributor for repair or parts replacement.**

Never disassemble the unit or replace parts by yourself. Warranty on any of our products shall be void if defect is caused by abuse, neglect, improper repair, improper fit, or any use unintended by the manufacturer.

Prior to Use

- Open the package and check if all the parts are inside without shortage and damage.

For Safe Use

- Be sure to read and understand this manual thoroughly before handling this product.
- Keep the instruction manual in hand and refer to it whenever needed.
- Store the instruction manual in a safe place. If the manual is lost or damaged, contact us or your local distributor for a new copy.

Applications

- * This product is pneumatic drill powered by compressed air and not to be use in following conditions and applications.
- * if the application is outside the specified operating range.
- * if any part of it has been modified or altered.
- * if normal compressed air is not available. Never use other power sources, such as oxygen, acetylene, and propane, etc.
- * near water or in ignitable environments.
- * in any way unintended by the manufacturer.

Icons for safety instructions



This unit may
cause vibration.



Wear
protective
goggles.



Wear earplugs.




Read the manual
before use.

How to Use

English 日本語

PIPING MODEL

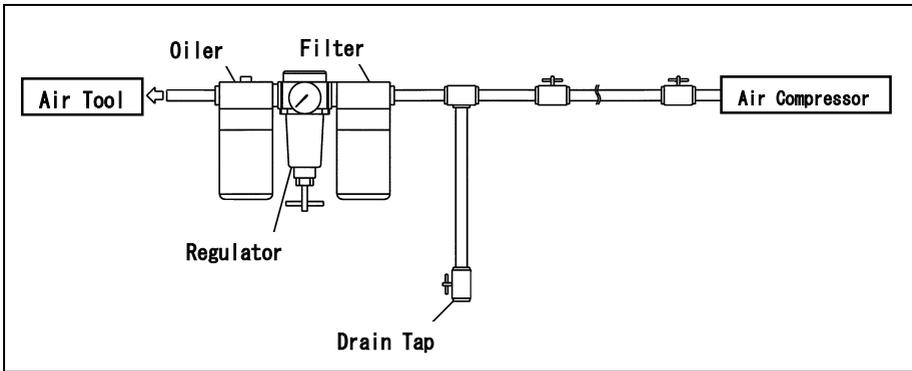

SPECIFICATIONS

			GT-CD60-34 / CD60-34L
Sound Level	L_{PA}	[dB]	82.8
	L_{WA}	[dB]	93.8
Vibrations Level		[m/s ²]	5.51
Uncertainty K		[m/s ²]	1.8

VESSEL CO.,INC. FUKAEKITA2-17-25,HIGASINARIKU,OSAKA,
JAPAN

PRODUCT: Air Corner Drill

MODEL: GT-CD60-34 / CD60-34L

DIRECTIVE: 2006/42/EC(98/37/EC) , EN 792

STANDARDS: ISO 20643,ISO 28927-5
ISO 15744

declared vibration value in accordance with EN 12096

DATE: August 3th, 2015

APPROVED BY Yasushi Shiomi

-For operating the tool, make sure to follow the procedures described in this instruction manual.

•Do not use the tool:

- * if the accessories has not been mounted properly.
- * if the any accessories have not been attached properly.
- * if the work environment does not allow you to keep a stable posture, secure a firm grip on the tool or to operate the tool properly.
- * if the floor is slippery or not level.
- * if the attached blade or other accessories are not intended for the use or application.
- * if it has been modified or has any parts missing or lost.
- * if the input air pressure is higher than the specified value.
- * if more than the specified working torque is required.

•When the tool is not in use or left unattended, shut off the air supply and detach the air hose from it.

Preparations before use

●Check the air pressure

The specified air pressure for this air tool is 0.6 MPa. If the input air pressure surpasses this specified level, it will cause damage on the unit or individual parts.

●Remove the drain

When moisture or impurities like rust in the pipe get into the mechanism, it may cause malfunction. Remove accumulated drain in the compressor before use. To secure dry air supply, install an air filter in order to prevent moisture and any impurities.

●Use an appropriate air hoses

Please refer to Specifications for choosing an air hose of the appropriate size for the applied air supply. If the internal diameter of the air hose is too small, sufficient power may not be obtained as air pressure cannot increase efficiently. It also happens when the hose is too long.


●Install the plug

•GT-CD60-34

Use a spanner of No.17 to hold Air Inlet Bushing and fasten the plug.

•GT-CD60-34L

Use a spanner of No.19 to hold Air Inlet Bushing and fasten the plug.

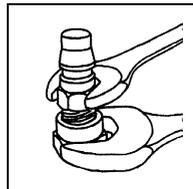

How to Use

●Air coupling

When using the air coupling included in the package, purchase a compatible connector. When connecting a hose directly to this product, purchase a hose connection coupling. In both cases, check the size of the connected hoses.

●Initial start up.

Please blow of dusts in the pipe work when you start up our product first time And please make idle running for few seconds without attaching drill bit to blow off oil inside of the product.

●Before use.

Please confirm condition of the product and drill bit before in use. Please do not attach drill bit when you confirm the rotation speed.

●Lubrication

Lubricate the unit regularly for smooth operation of the motor part and to remove impurities. If you install a lubricator, it will lubricate the tool automatically. Or, you can lubricate manually from the air supply port before or after use. (ISO VG10 or equivalent hydraulic oil.)

●Handling of the unit

Do not drop the unit or subject it to shock as it may cause damage. Also it must be kept away from any organic solvents as it may cause deformation.

●In cold areas


Moisture inside the tool may freeze in winter. Be sure to lubricate the tool to remove the moisture after use.

How to Use

●Installation of drill bit.

Please shut off air supply to the product when you remove or attach drill bit.

1. Fix corner head using handle.
2. Attach drill bit.
3. Fix drill bit using wrench attached.

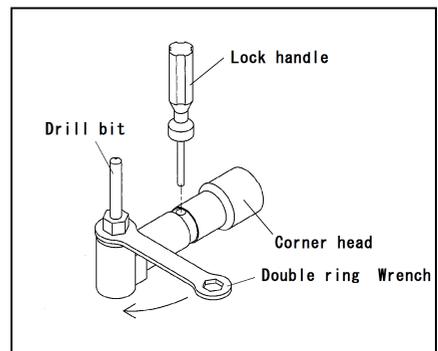

How to Use


日本語

English

●Start up


GT-CD60-34

1. Connect air consent.
2. Supply air from air compressor.
3. Is start rotate when throttle button is pressed.
4. To lock the throttle button to be pressed, press the throttle button and turn right.
5. Rotation stops when the throttle button is released. To unlock the throttle button, turn left.

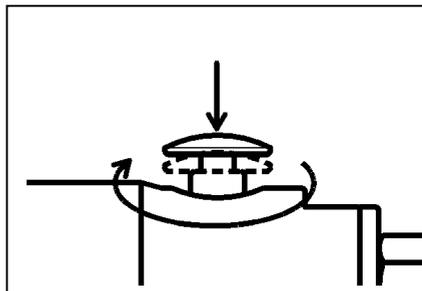

GT-CD60-34L

1. Connecting air coupling.
2. Supply air from air compressor.
3. Press the throttle lever to start the unit.
4. Release the throttle lever to stop the unit.

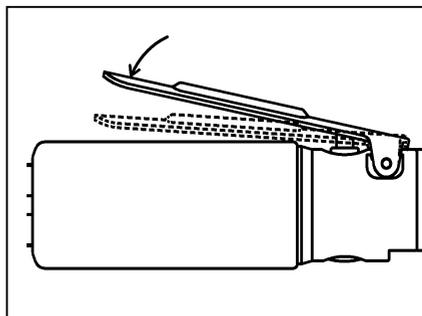

About handling

- *Please aware drilled hole sharp.
- *Do not free rotate product with drill bit.
- *Drill bit and Air supply disconnected when the product is not in use or during repair.
- * Do not direct the exhaust air towards people or fire. The exhaust is dangerous as it contains oil.
- * Do not touch the application and work piece during and after operation because they become very hot due to heat caused by friction.
- * When you notice any abnormalities, stop working and turn off the air supply.

- We recommend periodic inspections for safe, worry-free use. If inspections are neglected, it may affect the performance, lifespan and safety of the product.
- Inspection (maintenance) should be conducted only by those who carefully read and fully understood the instruction manual for this product.
- Contact the local distributor for repairs. Do not repair the unit by yourself.

Points of regular maintenance

When conducting maintenance, be sure to remove the hose coupling and do not supply any air.

●Drill bit

Abrasion...Drill bit should be replaced or re-sharpen when it is worn out.
Deformation or crack...Deformation or cracked accessories might break suddenly and. Stop using such damaged accessories and replace them.

●Hose couplings

Loose screws... Tighten them since it is dangerous if the hose comes off.

Worn out..... Replace with new parts since the coupling may come off if the connection is loose.

●Throttle button / ●Throttle lever

Return condition...Confirm whether the lever returns properly. It is very dangerous to use the tool continuously if the lever does not return properly because the tool will start suddenly after connected. If the lever does not return, please request repairs.

●Parts looseness

Parts Looseness cause air leak or failure of product so please ask for repair when the parts loose.

●Surface damage

Cracks Stop using and request repairs.

Troubleshooting

Troubleshooting

Trouble	Cause	Action
1. No rotation	Air is not provided.	Turn on the air.
	The hose is twisted.	Straighten the hose.
	Air pressure is low.	Adjust the air pressure.
	Parts are rusted due to a lack of lubrication.	Lubricate the unit.
	Dirt contamination.	Request overhaul
	Malfunction (worn out / damaged, etc.) on motor and Gear.	Request for parts replacement
2. Rotation is uneven.	Rate of air flow is inadequate.	Confirm air flow rate.
	Air pressure is low.	Adjust air pressure.
	Parts are rusted due to a lack of lubrication.	Lubricate the unit.
	Damage of gear or bearing	Replacement
3. Rotation does not stop.	Change of shape of the Throttle Valve.	Request for parts replacement
	Contamination by a foreign substance in the throttle valve.	Request overhaul
4. Drill bit cannot be fixed.	Screw of attachment part is damaged.	Replacement
5. Air leakage	Problem of throttle part. Ex. O-ring, Throttle spring, rusting, cracking	Request for parts replacement
6. Abnormal noise	Spare parts came loose.	Request overhaul
	Worn out and damaged bearings.	Request for parts replacement
	Gear part problem.	Request for parts replacement
	Worn out and damaged rotor blade.	Request for parts replacement

Troubleshooting

	The rotor blade does not come out at rotating.	Request for parts replacement
	Run out of lubrication and oil.	Lubricate the unit.
7. Water comes out.	The drain is clogged.	Clean the drain.

Request repairs immediately when the tool is in a defective and abnormal condition, etc., since it could lead to a product malfunction and accident. Please contact our distributor for repairs.

Storage

Please store the air tool in a safe location and be aware of dust, humidity, dew and freezing.

Exploded diagram drawing & Parts list

日本語

English

Specifications


Specification	Unit	GT-CD60-34	GT-CD60-34L
Cutting Capacity	mm	6	
Weight	g	820	840
Overall Length	mm	250	251
Free Load	rpm	3400	
Working Air Pressure	MPa	0.6	
Air Consumption	m ³ /min	0.42	
Air Compressor	kw	0.75 or bigger	
Air Hose Inner Dia.	mm	6.35	
Air Coupling	Rc	1/4	

Accessories


● VESSEL Air Coupling (BPB-2)	1PC
● Lock Handle	1PC
● Double Ring Wrench	1PC

Description / Dimensions

GT-CD60-34

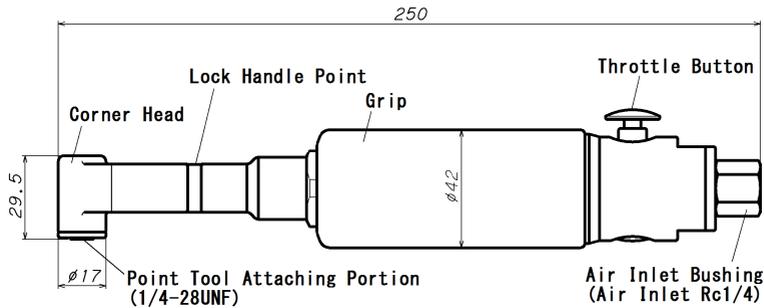


GT-CD60-34L

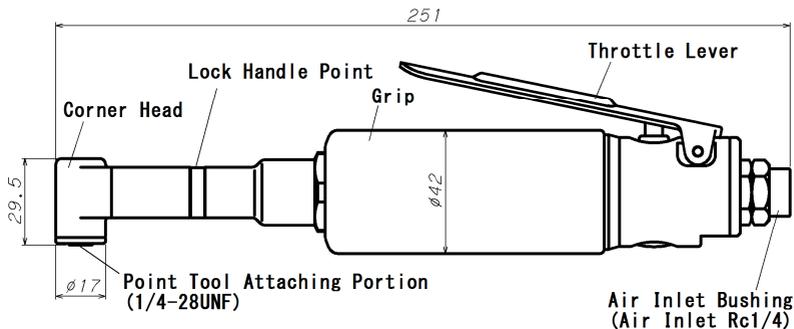

Exploded diagram drawing & Parts list

English 日本語

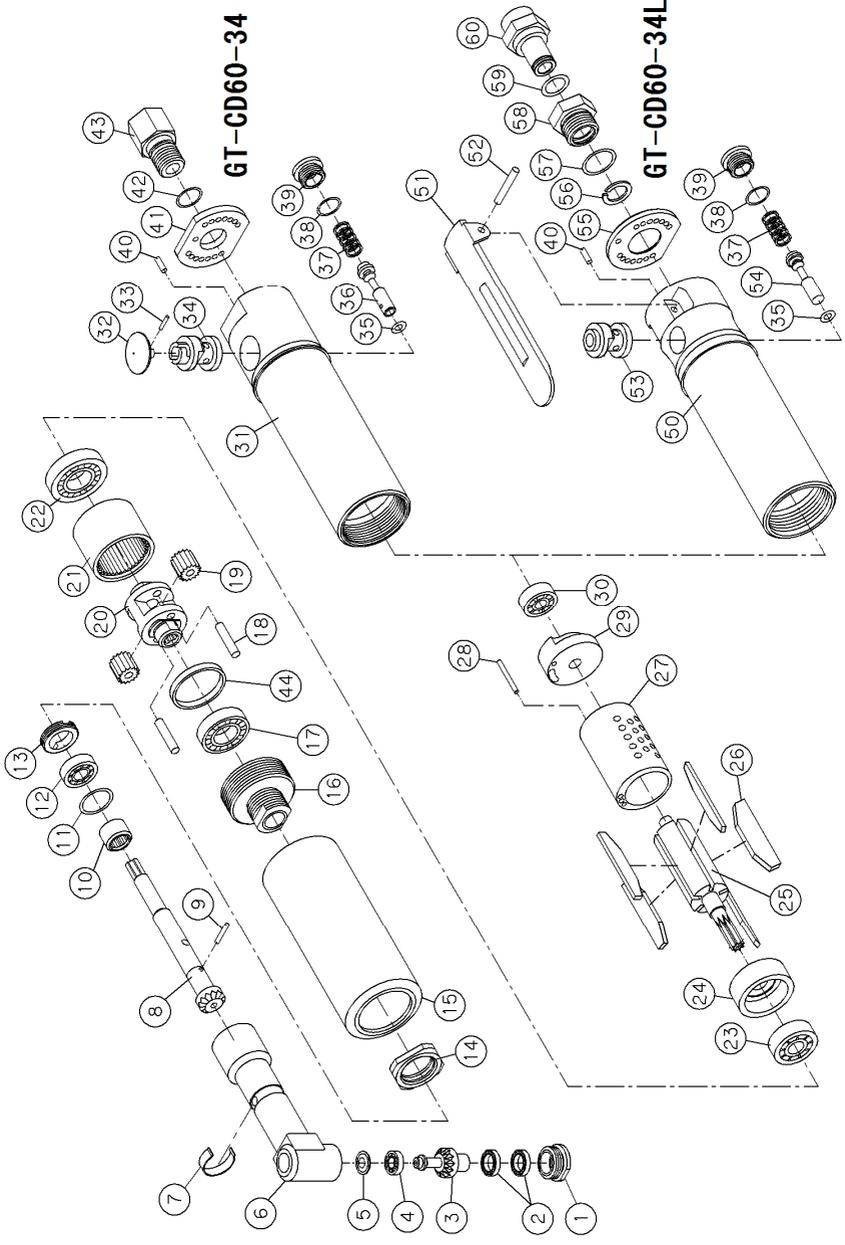

Exploded diagram drawing & Parts list

日本語

English

● GT-CD60-34 / CD60-34L

Index No.	EDP No.	Description	Size	Number Required Per Unit
1	846201	Setting Nut		1
2	846202	Setting Nut Bearing	※678	2
3	846203	Drive Gear 2		1
<4>	846204	Corner Head, Bearing	※685 (Installed No.6)	1
<5>	846205	Washer, Bearing	(Installed No.6)	1
6	846206	Corner Head Complete		1
7	846207	Ring		1
8	846208	Drive Gear 1		1
9	846209	Lock Pin For Needle Roller Bearing.	※SP2×12	1
10	846210	Needle Roller Bearing	※HK0910	1
11	846211	Washer, Adjustment	For Adjustment	-
12	846212	Drive Gear 1 Bearing	※697	1
13	846213	Holder For Bearing		1
14	846214	Lock Nut		1
15	846215	Grip		1
16	846216	Screw Joint		1
17	846217	Screw Joint, Bearing	※6901	1
18	846218	Needle Roller	※φ4×17.8	2
19	846219	Planetary Gear		2
20	846220	Frame, Gear		1
21	846221	Internal Gear		1
<22>	846222	Frame, Gear Bearing	※R8 (Installed No.21)	1
<23>	846223	Bearing	※608 (Installed No.24)	1
24	846224	Endplate Complete, Front		1
25	846225	Rotor		1
26	846226	Blade, Rotor		5
27	846227	Cylinder Complete		1
<28>	846228	Pin, Cylinder	※SP2×20 (Installed No.27)	2
29	846229	Endplate Complete, Rear		1
<30>	846230	Bearing	※606 (Installed No.29)	1
35	846235	O-ring, Throttle Valve	※P3	1
37	846337	Spring, Throttle Pin		1

Exploded diagram drawing & Parts list

38	846238	O-ring, Plug Cap	※S10	1
39	846239	Plug Cap		1
<40>	846240	Locating pin, Exhaust Cover	※SP2.5×8 (Installed No.31,50)	1
44	846244	Ring Alignment		1

● GT-CD60-34


Index No.	EDP No.	Description	Size	Number Required Per Unit
31	846231	Motor Case, Complete		1
32	846232	Throttle Button		1
33	846233	Pin, Throttle	※SP1.5×8	1
<34>	846234	Busch, Throttle	(Installed No.31)	1
36	846236	Valve, Throttle		1
41	846241	Exhaust Cover		1
42	846242	O-ring, Air Inlet Bushing	※S10	1
43	846243	Bushing, Air Inlet		1


● GT-CD60-34L


Index No.	EDP No.	Description	Size	Number Required Per Unit
50	846250	Motor Case , Complete		1
51	846251	Throttle Lever		1
52	846252	Pin, Throttle	※SP3 × 22	1
<53>	846253	Busch, Throttle	(Installed No.50)	1
54	846254	Valve, Throttle		1
55	846255	Exhaust Cover		1
56	846256	Snap Ring	※ISTW-11	1
57	846257	O-ring, Air Inlet Nut	※S12.5	1
58	846258	Nut, Air Inlet		1
59	846259	O-ring, Air Inlet Bushing	※S11.2	1
60	846260	Bushing, Air Inlet		1

Parts with < > marked shall not be supplied individually even if ordered since it is an integrated component.

●The contents of this manual are subject to be changed without notice.

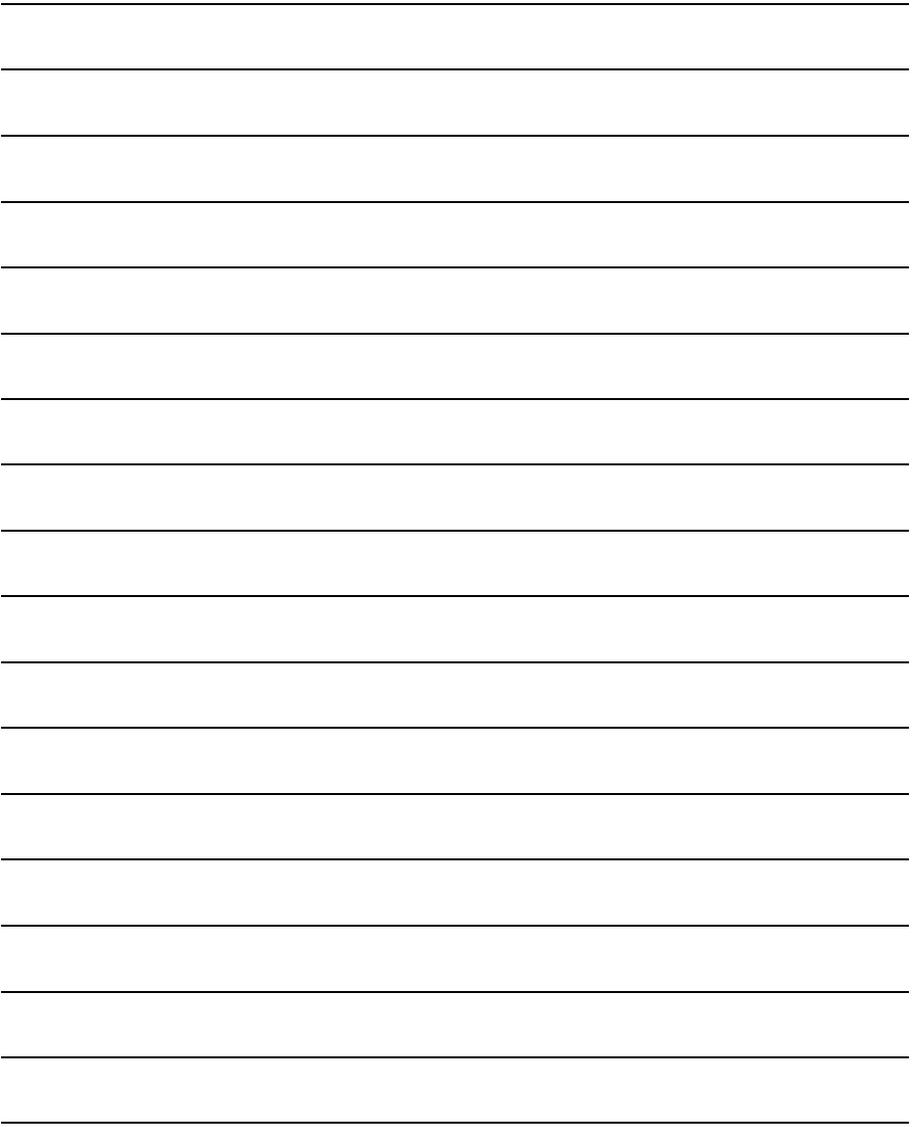

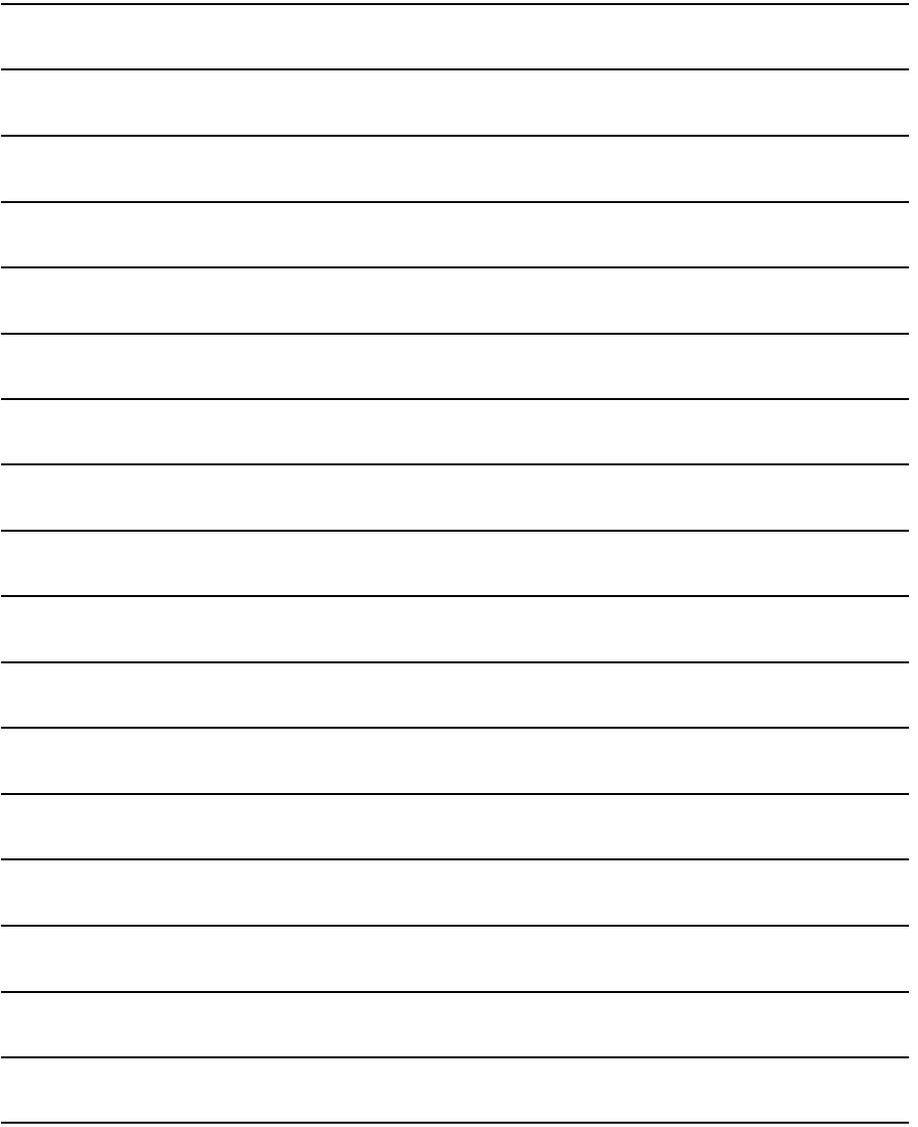

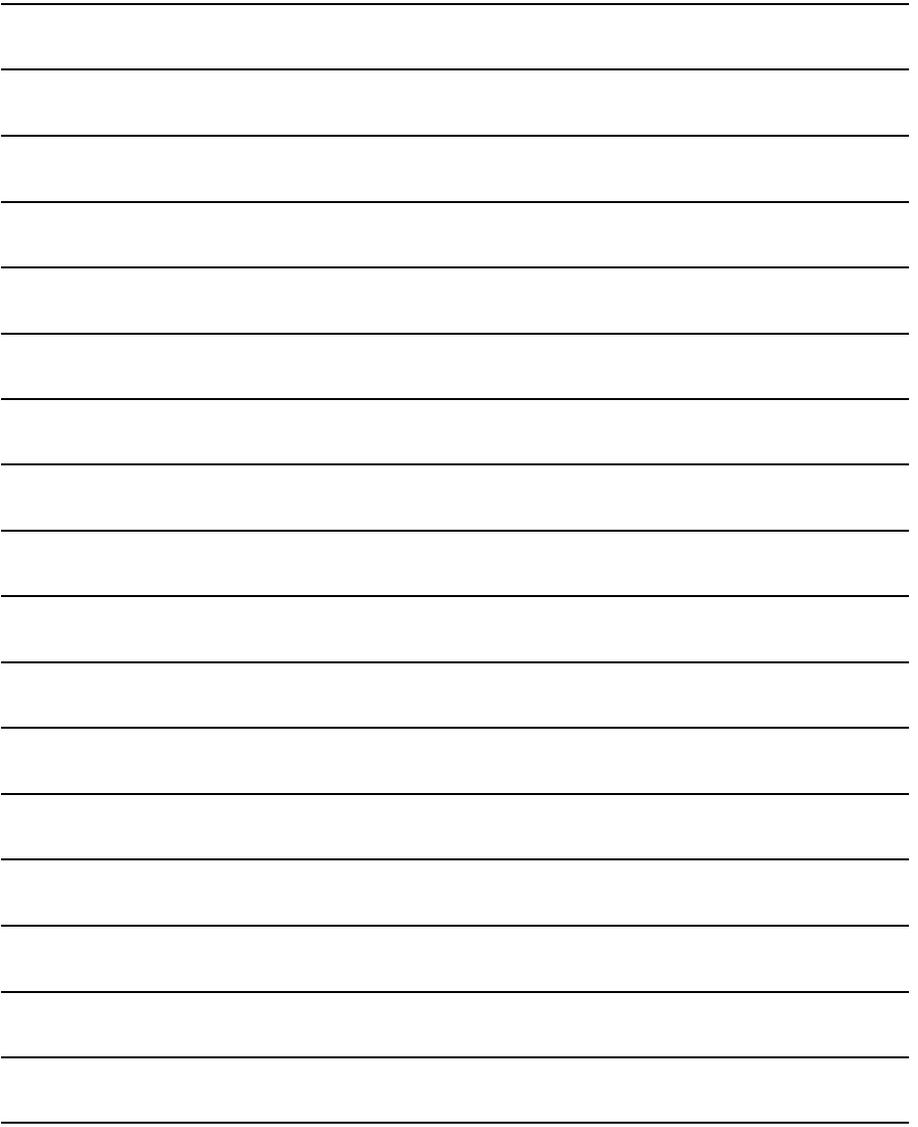

CERTIFICATE OF INSPECTION

MODEL	GT-CD60-34 CD60-34L	SERIAL NO.	
-------	------------------------	------------	--

We hereby certify that before shipment, above tool has been carefully inspected according to our factory engineering standard and the result has come out in satisfactory data. In order to maintain the best conditions of this tool, please be sure to take a few minutes to read through the instruction manuals and operate as recommended.

DATE

CHIEF INSPECTOR *Hiroyuki Adachi*

MANUFACTURED BY

VESSEL Co., Inc.

Manufactured by:

VESSEL Co., Inc.

17-25, Fukae-Kita 2-chome,
Higashinari-ku, Osaka 537-0001 Japan
Tel : +81 6 6976 7778 Fax : +81 6 6972 9441
E-mail : export@vessel.co.jp
URL : <http://www.vessel.co.jp/english/>

VESSEL

AIR CORNER DRILL
GT-CD60-34/CD60-34L

取扱説明書

株式会社ベッセル

まえがき

このたびは「エアコーナードリル GT-CD60-34/CD60-34L」をお買い上げいただきまして、まことにありがとうございます。

エアツールを安全に使用していただくために、ご使用前に必ず本書をよくお読みになり、内容を十分にご理解の上、正しくご使用ください。

△警告: 下記項目内容を十分理解の上、本書をお読みください。

■安全上の注意事項は、次の見出しを掲げております。いずれも安全に関する重要な内容を記載していますので、必ずお守りください。

△警告 誤った取り扱いをした時に、使用者が死亡または重傷を負う可能性が想定される場合。

△注意 誤った取り扱いをした時に、使用者が障害を負う可能性が想定される内容、および物的損害のみの発生が想定される場合。

※「注意」に記載した事項でも、状況によっては重大な結果に結びつく可能性があります。

■本書はご使用される方が、いつでも利用できる場所に大切に保管し、繰り返しお読みください。

■本書および製品に貼付されている警告表示ラベルを紛失または汚損された場合は、弊社もしくはご購入の販売店を通じ、速やかにお取り寄せの上、正しく保管または貼付してください。

■当製品を譲渡もしくは貸し出される場合は、本書を必ず添付してください。

お買い上げの製品または本書の内容についてご質問がございましたら、弊社もしくは、お買い上げの販売店までお問い合わせください。

△警告 ご使用前に必ず本書をよくお読みになり、内容を十分にご理解の上、正しくご使用ください。

△警告 ■エアツールの作動環境は

●適正な空気圧力で使用してください。

指定空気圧力以上での使用は製品の破損・事故の原因となりますので、圧力計、減圧弁等を設置して、必ず適正な空気圧力(手元動圧)で使用してください。

●エアコンプレッサ以外の動力源を使用しないでください。

エアツールはエアコンプレッサによる圧縮空気を動力源とする工具です。

安全にお使いいただくために

圧縮空気以外の高圧ガス(酸素・アセチレンガス・プロパンガス等)を使用すると爆発の危険があります。

● **適正なエアホースを使用してください。**

エアホースは耐油性で外面が耐摩耗性を有し、規定内径以上の作業空気圧力に適合したものを使用してください。また、老朽化したものや極端に長いものは使用しないでください。

● **エアホース取り付け具は確実に取り付けてください。**

取り付け不備によりエアホースがはずれた場合、エアの噴射によりエアホースが飛び回り非常に危険ですので、エアホース取り付け具はエアホースおよびエアツールに確実に取り付けてください。

△ **警告** ■ **作業環境は**

● **作業場は十分に明るくし、いつもきれいに保ってください。**

暗い作業場や散らかった作業場は事故の恐れがあります。照明等に留意し、整理整頓を心がけてください。

● **爆発の危険性のあるところでは使用しないでください。**

エアツールは引火や爆発の恐れがある場所では、危険ですので絶対に使用しないでください。

△ **警告** ■ **作業時の服装は**

● **きちんとした服装で作業してください。**

ダブダブの服やネックレス等の装身具は着用せず、作業に適した服装で作業してください。また、長い髪の毛がエアツールにかからないように、帽子等で覆ってください。

● **作業保護具を使用してください。**

不意の破損等からの人体保護のため、作業に応じヘルメット、保護めがね、耳栓、防塵マスク、防振手袋、安全靴等の作業保護具を使用してください。

△ **警告** ■ **エアツールを使用する場合は**

● **ぶつかけたり、投げつけたりしないでください。**

部品が損傷し、故障や事故の原因となりますので、絶対にぶつかけたり、投げつけたり、落としたりしないでください。

● **可動部に手や布きれ等を近づけないでください。**

使用中は非常に危険ですので、可動部に手や布きれ等を絶対に近づけないでください。

● **無理な姿勢での作業は危険です。**

エアツールを確実に保持し、突発的な動きにも対応できるようにして、安

定した作業姿勢で作業をおこなってください。

● **不意な始動を避けてください。**

エアホースを接続する場合は、スロットルボタン、スロットルレバーが停止位置になっているかを確認してください。またエアツールを持ち運びする場合はスロットルボタン、スロットルレバーに手をかけず、エアツールからエアホースを外して行ってください。

エアツールを作動させたままの放置や、移動は行わないでください。

● **電気に対し接触させないでください。**

エアツールは電気との接触に対し絶縁されていませんので、電気に対し接触させないように注意して使用してください。

● **異常を感じた場合は直ちに使用を中止してください。**

使用中に異常を感じた場合は直ちに使用を中止して、点検・修理を依頼してください。

● **加工物はしっかりと固定してください。**

加工物はパイプやクランプでしっかりと固定してください。加工物を手で持つより安全であり、工具を両手で操作することが出来ます。

加工物が不安定な状態で作業を行うと、ドリルや本体の早期摩耗や破損の原因となります。

● **無理な先端工具の使用は避けてください。**

必要以上に先端工具を押しつけたり、無理な角度で作業すると先端工具が破損する危険性があります。

作業中に先端工具が絡まって作動停止したときは、無理に外さずエアの供給を止めてから外してください。

● **適切な先端工具をご使用ください。**

● **作動停止後もしばらくの間エアツールは動いています。**

作動停止後、完全に停止するまで先端工具にふれたり、放置したりしないでください。

● **先端工具を取り付けたままみだりに無負荷で空転させないでください。**

先端工具を取り付けたままみだりに無負荷で空転させると、先端工具が外れる可能性があります大変危険です。

△警告

■ その他

● **指定された用途以外に使用しないでください。**

指定用途以外への使用は事故の原因になりますので、絶対におこなわないでください。

安全にお使いいただくために

- **改造は絶対にしないでください。**

改造をおこなったの使用は事故の原因になりますので、絶対におこなわないでください。

- **部品を取り外さないでください。**

取り付けられている部品を取り外しての使用は、事故の原因になりますので、絶対におこなわないでください。

- **危険が予想される場合はエアの供給を止め、エアホースをエアツールからはずしてください。**

使用しない、または保守点検をおこなう場合や、先端工具の交換をおこなう場合、その他危険が予想される場合は、必ずエアの供給を止め、エアホースをエアツールから外してください。

△注意

- **エアツール使用時の基本的な注意事項について**

- **作業は十分注意しておこなってください。**

軽率な行動や非常識な行動および疲れている場合の使用等はけがや事故の原因となりますので、油断しないで、十分注意して作業をおこなってください。

- **関係者以外は近づけないでください。**

作業場所には作業関係者以外は近づけないでください。特に子供は危険です。

- **無理な使用はおこなわないでください。**

過負荷での無理な使用は、エアツールや先端工具の破損や故障の原因となりますので、能力以内で使用するようにしてください。

- **排気の方角には十分に注意してください。**

事故や疾病の原因になりますので、排気が直接目や耳にあたらないように、排気方向に注意して使用してください。

- **反動に注意してください。**

穴あけ作業中にドリルが穴の底に達する時や、貫通時、穴あけ作業中に作動停止した時等に急な反動が発生することがありますので、注意してください。

- **穴あけが終了した時、作業対象物の加工箇所が鋭利になることがあるので、注意してください。**

- **エアツールの取り扱いは丁寧に行ってください。**

乱暴な取り扱いは事故や故障の原因となりますので、エアツールを投げたり落したりして、衝撃を与えないようにしてください。

- **エアホースの取り扱い**は丁寧に行ってください。
エアホースをエアツールの支えや、上げ下げに使用しないでください。エアホースの破損は事故の原因となります。
 - **高所作業**はエアツールの落下に注意してください。
エアツールの落下による事故を防止するため、高所での作業時は安全ワイヤの使用等の落下防止策を講じてください。
 - **保管**にも十分な配慮を行ってください。
使用しない場合は、十分に手入れをおこない、子供の手の届かない、乾燥した場所に保管してください。
 - **騒音に関する法条例**に注意してください
騒音に関しては、法令および各都道府県等の条例で定める規制があります。周囲に迷惑をかけないよう規制値以下で使用される必要があります。必要に応じ、遮音壁等を設けてください。
 - **適当に休憩**をおこなってください。
長時間の連続作業は疾病等の原因となりますので、適当に休憩を行ってください。また痛み等、身体に異常を感じた場合は、直ちに使用を中止し、医師の診断を受け、その指示に従ってください。
- △注意
- **保守・点検・修理**について
 - **使用前には必ず点検**を行ってください。
使用前には部品等の緩みや部品の損傷等がないか必ず点検してください。性能の低下や故障の原因となるばかりでなく、危険をとまなう恐れがあります。
 - **保守・点検を必ず実施**してください。
安全に効率良く作業していただくために、保守・点検を怠らないでください。
 - **修理は弊社または弊社認定（指定）のサービス工場**にご依頼ください。
修理は弊社または弊社認定（指定）のサービス工場に、お買い求めの販売店または代理店等を通じ、ご依頼ください。お客様の勝手な処置により、事故や不具合が生じた場合は責任を負いかねますので、あらかじめご了承ください

ご使用の前に

- ・開梱後、付属品が正しく入っているかご確認ください。
- ・取扱説明書を必ず読んで、十分理解するまで製品の操作・先端工具の交換などはおこなわないでください。
- ・取扱説明書は、いつも手元においてご使用ください。分からないことができた時は、取扱説明書で必ず確かめてください。
- ・取扱説明書は、紛失しないよう大切に保管してください。紛失した時は、新しいものを改めて注文してください。

用途

- ・当製品は、「金属等の穴あけ作業をエアコンプレッサによる圧縮空気を動力源としておこなう」ことを目的に設計開発されたエア工具です。
- 以下のような異なる用途での使用はおやめください。
- *仕様を示された能力以上または以下での使用。
 - *当製品を改造、溶接などをおこなったの使用。
 - *圧縮空気以外(酸素、アセチレンガス、プロパンガスなど)の動力源の使用。
 - *水中や引火雰囲気内での使用。
 - *その他予想外の異なる用途での使用。

安全性に関連する記号



振動発生の
恐れがあります



保護眼鏡を
着用してください




耳栓を
着用してください



製品ご使用前に
説明書を熟読してください

使用方法

配管例

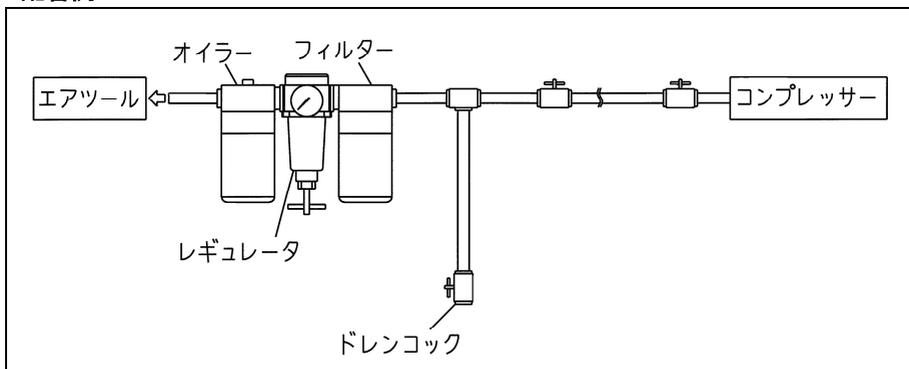

仕様

			GT-CD60-34 / CD60-34L
騒音値	L_{PA}	[dB]	82.8
	L_{WA}	[dB]	93.8
振動値 ahv		[m/s^2]	5.51

※振動値 ahv=周波数補正振動加速度実行値の3軸合成値

株式会社ベツセル: 〒537-0001
大阪市東成区深江北2丁目17番25号

製品名: エアコーナードリル

機種名: GT-CD60-34 / CD60-34L

2006/42/EC(98/37/EC)

振動測定規格: ISO 20643
ISO 28927-5

$$\text{日振動ばく露量 } A(8) = ahv \times \sqrt{\frac{T}{8}} \quad (m/s^2)$$

T=1日のばく露時間(1日の実使用時間)

騒音測定規格: ISO15744

・操作・運転について、必ず取扱説明書の手順をお守りください。

- ・以下のような使用は禁止します。
 - *先端工具が正しく取り付けられていない。
 - *先端工具を正しく使用しない。
 - *作業姿勢が不安定である、正しく保持できない、操作できない。
 - *滑りやすい、安定しない環境である。
 - *先端工具に想定された以外の用途に使用する。
 - *改造改変、部品の不足した状態で使用する。
 - *仕様を示されたエア圧力以上で使用する。
 - *当製品の使用負荷を超えた条件で使用する。
 - *など。
- ・不使用時、不在時は、エアの供給を止め配管から取り外してください。

作業前の準備

●使用空気圧力の確認

使用空気圧力は必ず0.6MPa以下でご使用ください。0.6MPa以上でご使用になりますと本体内部の部品が破損致します。

●ドレンの除去

水分や配管内の錆などの不純物が当製品に入りますと、故障の原因となります。コンプレッサーに溜まったドレンは使用前後に必ず除去してください。また、乾燥した正常なエアを当製品に供給するため、必ずエアフィルターを取り付け水分と不純物を取り除いてください。

●ホースの選定

エア供給用のエアホースのサイズは仕様をご参照ください。エアホース内径が小さいと圧力降下により十分な能力が発揮できません。またホースが長すぎても同様に圧力降下が発生しますので、ご注意ください。


●プラグの取り付け

・GT-CD60-34

インレットプッシュをスパナ(17)で固定し、プラグを締め付けてください

・GT-CD60-34L

インレットプッシュをスパナ(19)で固定し、プラグを締め付けてください

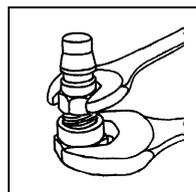

●エア継ぎ手

付属のエア継ぎ手を使用する場合は、互換性のあるエア継ぎ手をご購入の上、接続してください。当製品に直接ホースを取り付ける場合は、別途市販のホース接続継ぎ手をご購入ください。どちらも、接続するホースのサイズをお確かめください。

使用方法

●購入後最初の始動

購入後最初に本機をエアホースに取り付ける時や、ホースをとりかえた時は配管内、ホース内のゴミを十分吹き去ってから本機を取り付けてください。又、本機内のオイルが排気と共に吹き出しますので、数秒間先端工具を付けずに空転を行ってください。

●使用前

使用前にエアツールや先端工具に異常がないか確認してください。
回転数の確認は先端工具を装着せずに行ってください。

●給油

給油を怠ると錆や摩耗の発生により、故障の原因になるばかりでなく、事故の恐れがありますので、エアモーター部に 1 日 2～3 回**油圧作動油(VG10)**を数滴吸気口より補給して下さい。ルブリケーターを配管に取り付け自動滴下で供給すると便利です。

●目的以外の使用

本体の破損の原因になりますので、ぶついたり、叩いたりしないでください。又、有機溶剤につけたりすると変形しますのでご注意ください。

●寒冷地での使用


冬季には、内部に溜まった水分が凍結する場合があります。使用後は必ず注油し水分を除去してから保管してください。

使い方

●先端工具の取り付け

先端工具の取り付け、取り外しは必ず本体をエアホースから外し、エアを確実に遮断してから行ってください。


1. 固定ハンドルをコーナーヘッドの固定ハンドル差し込み穴に差し、工具取付部を固定します。
2. 先端工具をコーナーヘッド先端の工具取付部に取り付けます。
3. 付属のメガネレンチ等を使用して、しっかりと締め付けてください。

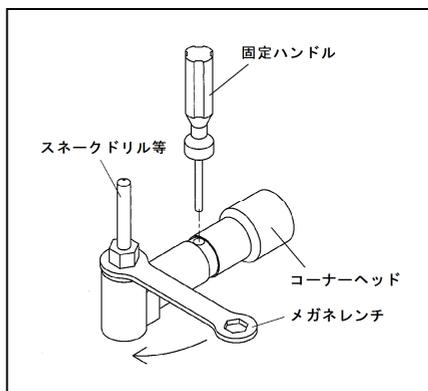

● 始動と停止


GT-CD60-34

1. エア継ぎ手を接続します。
2. コンプレッサーよりエアを供給します。
3. スロットルボタンを押すと始動します。
4. スロットルボタンを押しながら右に回すとスロットルボタンを作動状態のまま固定が可能です。
5. スロットルボタンを離す(戻す)と停止します。スロットルボタンを固定している場合は左に回した後離す(戻す)と停止します。

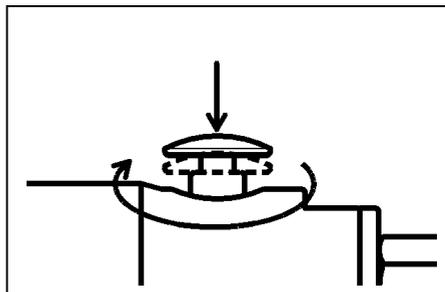

GT-CD60-34L

1. エア継ぎ手を接続します。
2. コンプレッサーよりエアを供給します。
3. スロットルレバーを押すと始動します。
4. スロットルレバーを離す(戻す)と停止します。

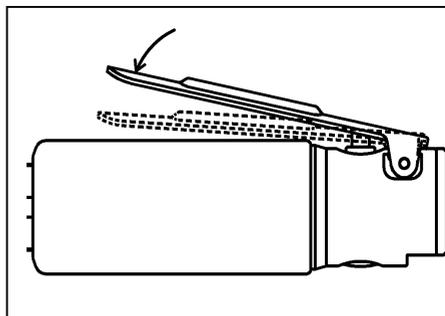

取り扱いについて

- *穴をあけた部分に手を触れないでください。けがの原因となり大変危険です。
- *先端工具を付けて、無負荷での作動は、みだりにおこなわないでください。
- *作業を中断・終了する時又、先端工具及び部品交換は必エアツールをエアホースから外し、エアを確実に遮断してください。
- *排気を人や火気に向けないでください。排気には油が含まれており危険です。
- *作業中、摩擦で先端工具や切削物が熱くなっていますのですぐに触らないでください。
- *異常発生時は、すぐにエアを遮断し、作業を中止してください。

- ・安全に安心してお使いいただくため、定期点検をお勧めします。点検を怠りますと、製品の性能や寿命・安全性に影響します。
- ・点検(保守)は、本製品の取扱説明書をよく読み熟知した方以外はおこなわないでください。
- ・修理は、ご購入の販売店にご依頼ください。ご自身ではおこなわないでください。

製品の点検範囲

点検をおこなう際は、必ずホース継ぎ手ははずし、エアが供給されていない状態でおこなってください。

使用頻度により部品の耐久性は異なります。

●ドリル等の先端工具

ドリル等の磨耗…能率が悪くなり、折れる原因となりますので再研磨を行うか、新品と交換してください。

変形、亀裂…破損・飛散の恐れがあります。使用を中止し新品と交換してください。

●ホース継ぎ手

ネジの緩み…ホース外れにより危険ですので、締めなおしてください。

磨耗…継ぎ手の接続が緩み、外れる場合がありますので新品と交換してください。

●スロットルボタン / スロットルレバー

戻り具合…正しく戻るかどうか確認してください。戻らない状態で使用すると接続した瞬間に作動を始めるので大変危険です。修理を依頼してください。

●各部の緩み

緩み…エア漏れや作動不良の原因となります。修理を依頼してください。

●表面の傷

亀裂…破損・飛散の恐れがありますので、使用を中止し修理を依頼してください。

異常時の処置

エアーツール・トラブルシューティング

症状	原因	処置
1. 回らない	エアがきていない	エアの開栓
	ホースがねじれている	ホースをのばす
	エア圧が低い	エア圧力調整
	注油不足による部品の錆	注油／分解調整
	ごみの混入	分解調整
	モーター部・ギヤ部の故障(磨耗・破損等)	部品交換
2. 回転にムラがある	エア流量が不足している	エア流量確認
	エア圧が低い	エア圧力調整
	注油不足による部品の錆	注油／分解調整
	ギヤ部、ベアリングの破損	部品交換／分解調整
3. 回転が止まらない	スロットルバルブの変形	部品交換
	スロットル部に異物混入	分解調整
4. 先端工具が固定できない	先端工具取付ネジ部の破損	部品交換
5. エア漏れがする	スロットル部の異常(オリング、スロットルスプリングの磨耗・破損・錆)など	部品交換
6. 異音がする	各部の緩み	分解調整
	ベアリングの磨耗・破損	部品交換／分解調整
	ギヤ部の磨耗・破損	部品交換／分解調整
	ローター羽根の磨耗・破損	部品取り付け
	ローター羽根が回転時にでない	部品取り付け
	注油・オイル切れ	注油／分解調整
7. 水がでる	ドレンが溜まっている	ドレン除去

不良や異常のままでの使用した場合、製品の故障や事故の原因となりますのですみやかに修理を依頼してください。修理はお買い上げの販売店にご相談ください。

保管



・埃、湿度、結露、凍結に注意して、安定した場所に保管してください。


分解図／部品図

仕様	単位	GT-CD60-34	GT-CD60-34L
穴あけ能力	mm	6	
重量	g	820	840
全長	mm	250	251
回転数	rpm	3400	
使用空気圧力	MPa	0.6	
空気消費量	ml/min	0.42	
使用コンプレッサー	kw	0.75 以上	
使用エアホース(内径)	mm	6.35	
ホース継手	Rc	1/4	

付属品		
●	ベツセルコンセント(BPB-2)	1 個
●	固定ハンドル	1 本
●	メガネレンチ	1 本

各部名称／外観図

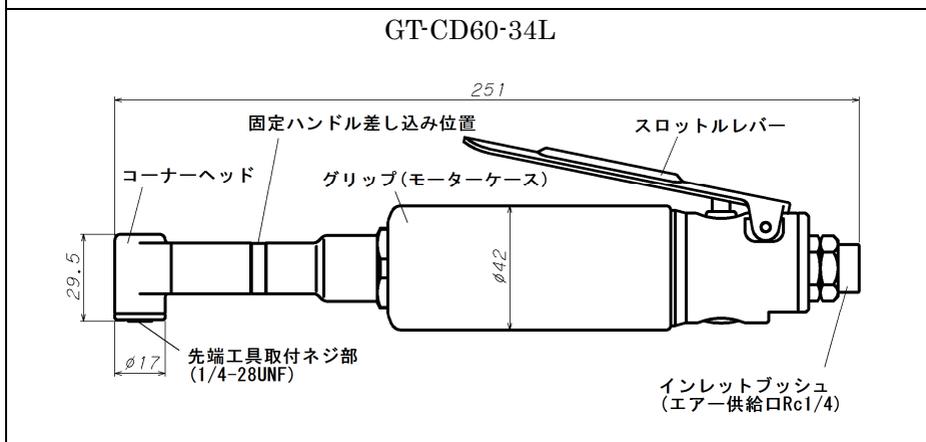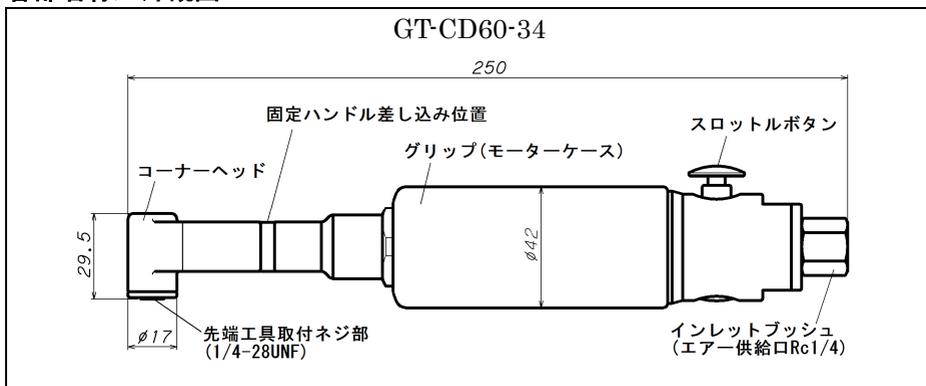

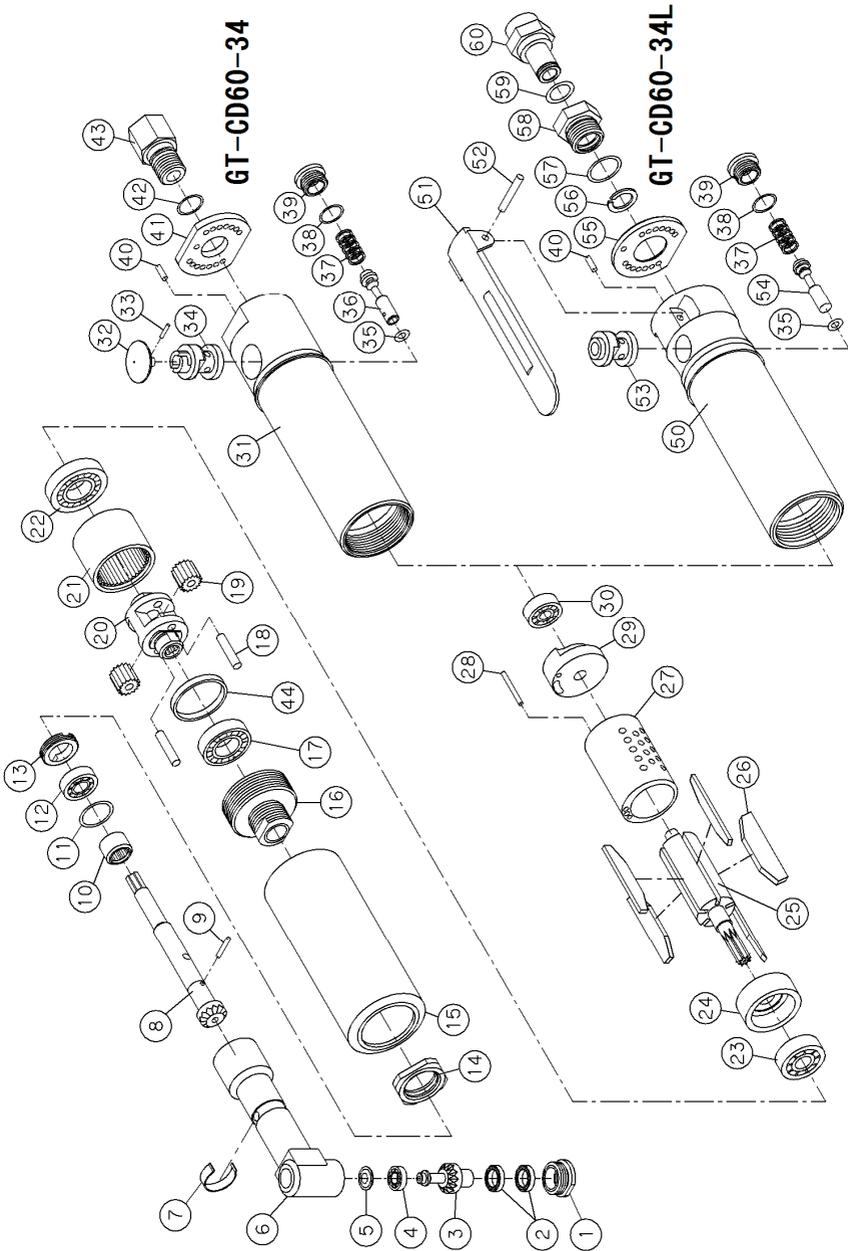

分解図／部品図

●GT-CD60-34 / CD60-34L 共通部品

部品番号	部品名称	サイズ	1台数量
1	セットナット		1
2	セットナットベアリング	※678	2
3	ドライブギア 2		1
<4>	コーナーヘッドベアリング	※685(部品番号 6 に内蔵)	1
<5>	ベアリングワッシャー	(部品番号 6 に内蔵)	1
6	コーナーヘッド CP		1
7	リング		1
8	ドライブギア 1		1
9	針状コロ軸受け固定ピン	※SP2×12	1
10	針状コロ軸受け	※HK0910	1
11	アジャストワッシャー	調整用	-
12	ドライブギア 1 ベアリング	※697	1
13	ベアリングホルダー		1
14	ロックナット		1
15	グリップ		1
16	スクリュージョイント		1
17	スクリュージョイントベアリング	※6901	1
18	針状コロ	※φ4×17.8	2
19	プラネットギア		2
20	ギヤフレーム		1
21	インターナルギア		1
<22>	ギヤフレームベアリング	※R8(部品番号 21 に内蔵)	1
<23>	エンドプレート前ベアリング	※608(部品番号 24 に内蔵)	1
24	エンドプレート前 CP		1
25	ローター		1
26	ローター羽根		5
27	シリンダーCP		1
<28>	シリンダー固定ピン	※SP2×20(部品番号 27 に内蔵)	1
29	エンドプレート後 CP		1
<30>	エンドプレート後ベアリング	※606(部品番号 29 に内蔵)	1
35	スロットバルブ O リング	※P3	1
37	スロットルスプリング		1

分解図／部品図

38	プラグ栓 Oリング	※S10	1
39	プラグ栓		1
<40>	排気カバー位置決めピン	※SP2.5×8(部品番号 31,50 に内蔵)	1
44	アライメントリング		1

< >印につきましては内蔵部品ですので、ご注文の際はご注意ください。

●GT-CD60-34 部品

部品番号	部品名称	サイズ	1台数量
31	モーターケース CP		1
32	スロットルボタン		1
33	スロットルボタン固定ピン	※SP1.5×8	1
<34>	スロットルブッシュ	(部品番号 31 に内蔵)	1
36	スロットルバルブ		1
41	排気カバー		1
42	インレットブッシュ Oリング	※S10	1
43	インレットブッシュ		1

< >印につきましては内蔵部品ですので、ご注文の際はご注意ください。

●GT-CD60-34L 部品

部品番号	部品名称	サイズ	1台数量
50	モーターケース CP		1
51	始動レバー		1
52	始動レバーピン	※SP3×22	1
<53>	スロットルブッシュ	(部品番号 50 に内蔵)	1
54	スロットルバルブ		1
55	排気カバー		1
56	インレットナット止リング	※ISTW-11	1
57	インレットナット Oリング	※S12.5	1
58	インレットナット		1
59	インレットブッシュ Oリング	※S11.2	1
60	インレットブッシュ		1

< >印につきましては内蔵部品ですので、ご注文の際はご注意ください。

アフターサービスについて…

1. 本機の性能、品質または取り扱いなどについてのお問い合わせの事項は、販売店（又は当社）へご連絡ください。
2. 修理に必要な部品は分解図に記載された部品番号、部品名を確認の上で要求してください。
3. 修理等は下図の経路でご送付ください。直接当社へ送付されるとかえって遅れますので避けてください。

ユーザー → **販売店** → **当社**

注 ※印部品は一般市販されております。市販品ご使用の際は品質のよいものをお選びください。

- 本書の内容は予告なく変更することがあります。

検査合格証	
製造番号	
<p>本機は性能およびその他の出荷検査をした後出荷されております。 本機が性能を発揮するために、この取扱説明書をよくお読みいただき、正しくご使用ください。</p>	
検査:	
VESSEL Co., Inc.	

株式会社ベッセル

お客様お問い合わせ窓口 (企画開発部)

フリーコール **0120-999-914**

9:00-17:00 ※土・日・祝日は除きます

本社 〒537-0001 大阪市東成区深江北2丁目17番25号 TEL.06-6976-7771 FAX.06-6971-1309
東京支店 〒143-0025 東京都大田区南馬込5丁目43番13号 TEL.03-3776-1831 FAX.03-3776-5607
大阪支店 〒537-0001 大阪市東成区深江北2丁目17番25号 TEL.06-6976-7771 FAX.06-6971-1309
名古屋営業所 〒457-0014 名古屋市南区呼続四丁目3番1号 TEL.052-821-9675 FAX.052-824-4167
福岡営業所 〒812-0016 福岡市博多区博多駅前6丁目1番22号 TEL.092-411-5710 FAX.092-411-5770
札幌出張所 〒065-0011 札幌市東区北11条東14丁目1番1号 TEL.011-711-5003 FAX.011-704-4725
仙台出張所 〒984-0002 仙台市若林区卸町東1丁目2番10号 TEL.022-236-1567 FAX.022-232-7959
広島出張所 〒733-0035 広島市西区南観音7丁目8-11 TEL.082-291-0106 FAX.082-295-1727

<http://www.vessel.co.jp/>